



WF0852W8(E/N/S/V/W)
WF0854W8(E/N/S/V/W)
WF0852Y8(E/N/S/V/W)
WF0854Y8(E/N/S/V/W)

Washing Machine

user manual



100%
Recycled Paper

This manual is made with 100% recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive a more complete service, please
register your product at

www.samsung.com/register



features of your new samsung washing machine

Your new washing machine will change the way you feel about doing laundry. From its specialised Eco Bubble function to its energy efficiency, your new Samsung washing machine has all the benefits to make washing laundry as easy and pleasant as possible.

- **Energy Saving**

This model offers more efficient energy use compared to standard A rated machine with the special Bubble generator system and Quiet Drive inverter motor.

- **Eco Bubble Wash**

Samsung's effective Eco Bubble delivers improved cleanliness with advanced fabric care. Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.

- **Quick Wash**

No time to waste! Quick Wash program can help your busy life - now you can wash your favorite clothes (up to 2Kg) in 15 minutes!

- **Quiet Drive Motor**

Samsung's unique Quiet Drive Motor works without belts or gears, reducing vibration and making the washer quieter and more durable.

- **Eco Drum Clean**

Using Eco Drum Clean helps to keep washing machine clean even without any chemical detergent or bleach. Keep your drum clean and odorless with specialized cleaning program.

- **Baby Care**

Your Samsung washing machine includes wash programs that add protection to the clothing of children with sensitive skin. These programs reduce skin irritation in children by minimizing detergent residue. In addition, these programs classify laundry into various types and the wash is performed according to the laundry characteristics so that children's clothes feel refreshingly clean whenever they are put on.

- **Wool Certified**

The machine has been tested and passed the required Woolmark Company specification for machine washable wool products. This mark is the upgraded certification better than the existing Woolmark, which guarantees not only washing performance but also fabric care for wool products. Fabrics should be washed according to the instructions on the garment label as specified by Woolmark and Samsung.

- **Hand Wash**

Special care can be determined by the appropriate temperature, the gentle wash action and the appropriate amount of water.

- **Delay End**

Delay a cycle for up to 19 hours in one-hour increments and increase the convenience of using your washing machine especially when you have to go out.

- **Child Lock**

The Child Lock function ensures that curious little hands are kept out of your washing machine. This safety feature stops your children from playing with the operation of the washing machine, and alerts you when it is activated.

- **Digital Graphic Display**

The Digital Graphic Display control panel is clear and easy to use for minimum fuss and hassle. And while it is easy to operate, the Digital Graphic Display enables you to make quick and accurate adjustments to your wash for excellent washing results.

- **Wide door**

Extra wide door aperture for convenient viewing! Easily add and remove laundry, especially for large sized laundry items such as bedding, towels etc.

This manual contains important information on the installation, use, and care of your new Samsung washing machine. Refer to it for descriptions of the control panel, instructions on how to use the washing machine, and tips for making the most of its state-of-the-art features and functions. The “**Troubleshooting and information codes**” section on page 37 tells you what to do if something goes wrong with your new washing machine.

safety information

Congratulations on your new Samsung washer. This manual contains important information on the installation, use and care of your appliance. Please take time to read this manual to take full advantage of your washer's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance and retain it at a safe place near the appliance for your future reference. Use this appliance only for its intended purpose as described in this instruction manual.

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer.

Because these following operating instructions cover various models, the characteristics of your washer may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

 WARNING	Hazards or unsafe practices that may result in severe personal injury, death and/or property damage.
 CAUTION	Hazards or unsafe practices that may result in personal injury and/or property damage.
 CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:
 CAUTION	To reduce the risk of fire or explosion, follow these basic precautions.
	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service centre for help.
	Note

**These warning signs are here to prevent injury to you and others.
Please follow them explicitly.**

After reading this section, keep it in a safe place for future reference.

 Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

Do not let children (or pets) play on or in your washing machine. The washing machine door does not open easily from the inside, and children may be seriously injured if trapped inside.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This appliance should be positioned to be accessible to the power plug, the water supply tabs and the drain pipes.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Use the new hose-sets and old hose-sets should not be reused.

safety information



SEVERE WARNING SIGNS FOR INSTALLATION



The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, take care upon lifting it

Plug the power cord into an AC 220-240V / 60Hz wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

When the appliance or power plug or power cord is damaged, contact your nearest service centre.



This appliance must be properly grounded.

Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.



Do not install this appliance near a heater, inflammable material.

Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).

Do not install this appliance in a location of low temperature

- Frost may cause tubes to burst

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Do not use an electric transformer.

- It may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.

Do not twist or tie the power cord.

6_ safety information

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

Do not lay the power cord and tubes where you may fall over them.



CAUTION SIGNS FOR INSTALLATION



This appliance should be positioned in such a way that it is accessible to the power plug.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.

- Failure to do so may result in abnormal vibrations, moves, noise, or problems with the product.



SEVERE WARNING SIGNS FOR USING



If the appliance is flooded, Turn off the water & power supply immediately and contact your nearest service centre.

- Do not Touch the power plug with wet hands
- Failure to do so may cause electric shock

If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washer. In addition, when disposing of the appliance, remove the washer door lever.

- If trapped inside, the child may become trapped and suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washer before using it.

safety information

-  Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other flammable or explosive substances.

- This may result in electric shock, fire or an explosion.

Do not open the washer door by force while it is operating (high-temperature washing/drying/spinning).

- Water flowing out of the washer may result in burns or cause the floor to be slippery.

This may result in injury.

- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washer.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or infirm persons use this washer unsupervised. Do not let children climb in the appliance

- Failure to do so may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washer while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling at the power cord, always grip plug firmly and pull straight out from the outlet.

- Damage to the cord may cause short-circuit, fire and/or electric shock

-
-  Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse (such as cooper, steel wire, etc.) other than the standard fuse.

- When repairing or reinstalling the appliance is required, contact your nearest service centre.

- Failure to do so may result in electric shock, fire, problems with the product, or injury.

-
-  If the water supply hose comes loose from the Water tap and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.

- Failure to do so may result in electric shock or fire.



CAUTION SIGNS FOR USING



When the washer is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washer using a damp and soft cloth.

- Failure to do so may result in discolouration, deformation, damage or rust.

The front glass may be broken by a strong impact. Take care when using the washer.

- When the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the Water Tap slowly.

Open the Water Tap slowly after a long period of non-use.

- The air pressure in the water supply hose or the water pipe may result in damage to a part or in water leakage.

If a drain error occurs during an operation, check if there is a draining problem.

- If the washer is used when it is flooded because of a draining problem, it may result in electric shock or fire due to electric leakage.

Insert the laundry into the washer completely so that laundry does not get caught in the door.

- If laundry gets caught in the door, it may result in damage to the laundry or the washer, or result in water leakage.

Ensure that the Water Tap is turned off when the washer is not being used.

- Ensure that the screw on the water supply hose connector is properly tightened.
- Failure to do so may result in property damage or injury.

Take care that the rubber seal and the front door glass are not contaminated by a foreign substance (e.g. waste, thread, hair, etc.)

- If a foreign substance is caught in the door or the door is not completely closed, it may cause a water leakage.

Open the Water Tap and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the product.

- If the screws or the water supply hose connector are loose, it may result in water leakage.

The product you have purchased is designed for domestic use only.

The use for business purposes qualifies as product misuse.

In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

safety information

 Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not place an object that generates a electromagnetic field near the washer.

- This may result in injury due to a malfunction.

Since the water drained during a high-temperature wash or drying cycle is hot, do not touch the water.

- This may result in burns or injury.

Do not wash, spin or dry water-proof seats, mats or clothing (*) unless your appliance has a special program for washing these items.

- Do not wash thick, hard mats even if the washer mark is on the care label.
- This may result in injury or damage to the washer, walls, floor or clothing due to abnormal vibrations.

* Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle, car covers, etc.

Do not operate the washer when the detergent box is removed.

- This may result in electric shock or injury due to water leakage.

Do not touch the inside of the tub during or just after drying as it is hot.

- This may result in burns.

Do not insert your hand into the detergent box after opening it.

- This may result in injury as your hand may be caught by the detergent input device. Do not place any objects (such as shoes, food waste, animals) other than laundry into the washer.
- This may result in damage to the washer, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knives, fingernails, etc.

- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.

- This may result in the rubber seal becoming deformed and water leakage.

Do not leave metal objects such as a safety pin or hair pin, or bleach in the tub for long periods of time.

- This may cause the tub to rust.
- If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.

- This may result in spontaneous combustion or ignition due to the heat of the oxidation of the oil.

Do not use hot water from water cooling/heating devices.

- This may result in problems with the washer.

Do not use natural hand-washing soap for the washer.

- If it hardens and accumulates inside the washer, it may result in problems with the product, discolouration, rust or bad odors.

Do not wash large laundry items such as bedding in the washing net.

- Place socks and brassieres into the washing net and wash them with the other laundry.
- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.

- If it accumulates inside the washer, it may result in water leakage.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Make sure that the pockets of all clothing to be washed are empty.

- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons, or other heavy metal.



WARNING

SEVERE WARNING SIGNS FOR CLEANING



Do not clean the appliance by spraying water directly onto it.

Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failure to do so may result in electric shock or fire.

contents

SETTING UP YOUR WASHING MACHINE

13

- 13 Checking the parts
- 14 Meeting installation requirements
 - 14 Electrical supply and grounding
 - 14 Water Supply
 - 15 Drain
 - 15 Flooring
 - 15 Surrounding temperature
 - 15 Alcove or closet installation
- 15 Installing your washing machine
- 20 Environment

WASHING A LOAD OF LAUNDRY

21

- 21 Washing for the first time
- 21 Basic instructions
- 22 Using the control panel
 - 25 Child lock
 - 25 Sound off
 - 26 Delay end
 - 26 My cycle
 - 27 Eco Bubble
 - 28 Washing clothes using the cycle selector
 - 29 Washing clothes manually
- 29 Laundry guidelines
- 30 Detergent and additives information
 - 30 Which detergent to use
 - 31 Detergent drawer
 - 31 Liquid Detergent (Selected models)

CLEANING AND MAINTAINING YOUR WASHING MACHINE

32

- 32 Hygiene Drum Clean
- 33 Draining the washing machine in an emergency
- 34 Cleaning the debris filter
- 34 Cleaning the exterior
- 35 Cleaning the detergent drawer and drawer recess
- 35 Cleaning the water hose mesh filter
- 36 Repairing a frozen washing machine
- 36 Storing your washing machine
- 37 Check these points if your washing machine...
- 38 Information codes

TROUBLESHOOTING AND INFORMATION CODES

37

CYCLE CHART

39

APPENDIX

40



- 39 Cycle chart
- 40 Fabric care chart
- 40 Protecting the environment
- 40 Declaration of conformity
- 41 Specifications

setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

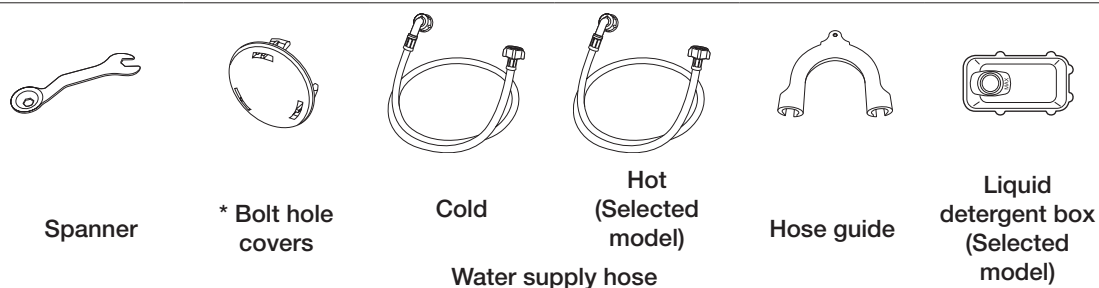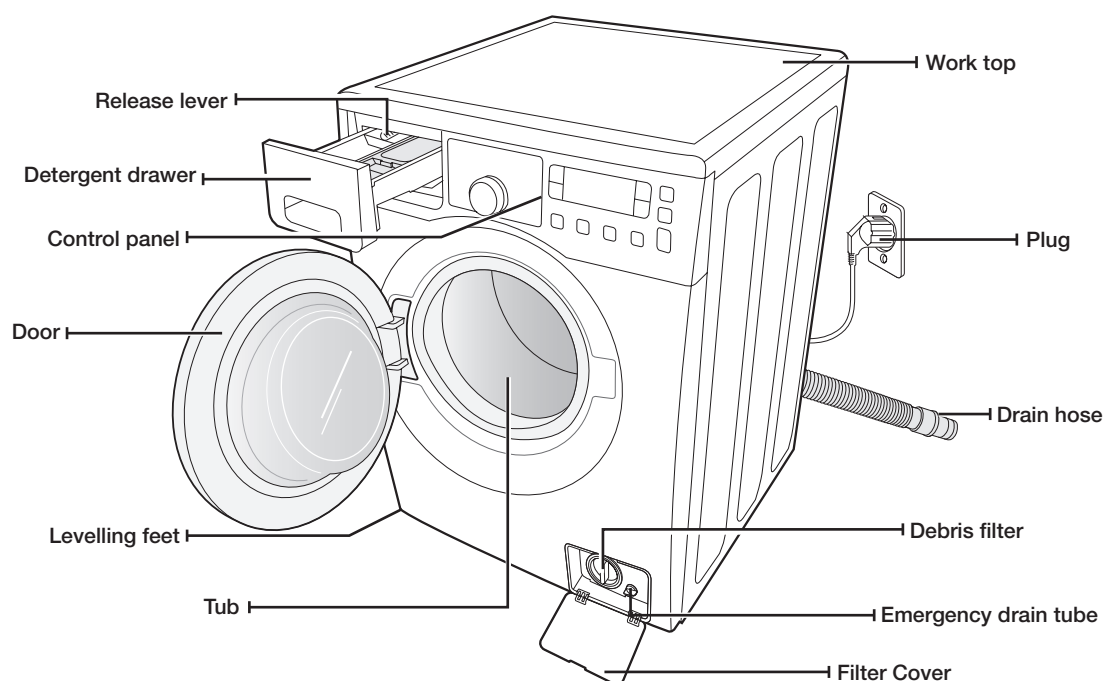

*** Bolt hole covers** : The number of bolt hole covers depends on the model (3~5 covers).

setting up your washing machine

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding



Never use an extension cord.
WARNING Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:

- AC 220-240V / 60Hz fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.

Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.



Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result in electric shock. Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 120cm of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.



Most plumbing supply stores sell inlet hoses of various lengths up to 305 cm long.

You can reduce the risk of leaks and water damage by:

- Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- Periodically checking for leaks at water inlet hose fittings.



WARNING Before using your washing machine for the first time, check all connections at the water valve and taps for leaks.

Drain

Samsung recommends a standpipe height of 65cm. The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components.

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides – 25 mm

Rear – 50 mm

Top – 25 mm

Front – 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1

Selecting a location



Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 0 °C)
- Is away from heat sources such as oil or gas
- Has enough space so that the washing machine doesn't stand on its power cord


setting up your washing machine

STEP 2


Removing the shipping bolts

Before installing the washing machine, you must remove all shipping bolts from the back of the unit.


1. Loosen all the bolts with the supplied wrench.

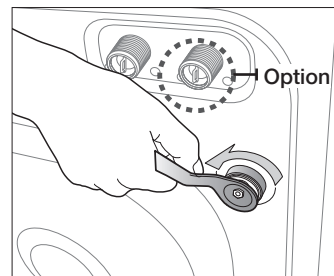

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

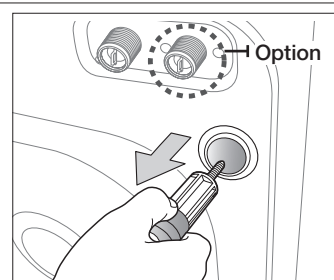

3. Fill the holes with the supplied plastic covers.

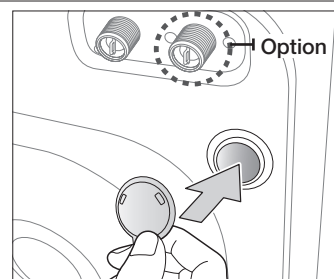

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.



WARNING Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.


STEP 3

Adjusting the Levelling feet


 When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

1. Slide the washing machine into position.

2. Level your washing machine by turning the levelling feet in and out as necessary by hand.

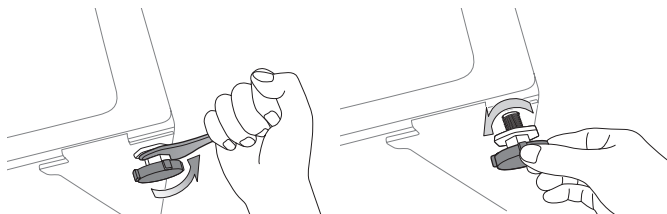

3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.

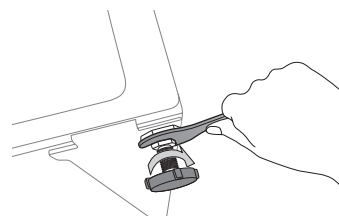

STEP 4


Connecting the water and drain

Connecting the water supply hose

1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.

 The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.

2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

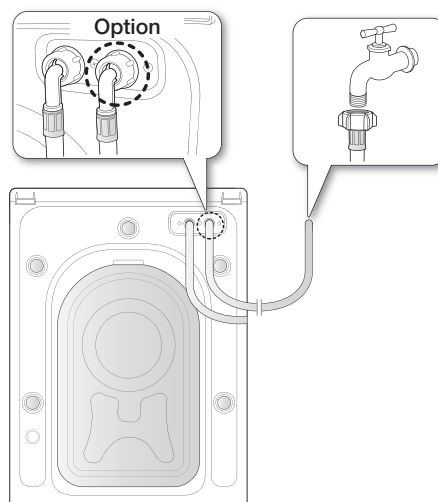


For selected models with an additional hot water intake:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.


setting up your washing machine

Connecting the water supply hose


1. Remove the adaptor from the water supply hose.

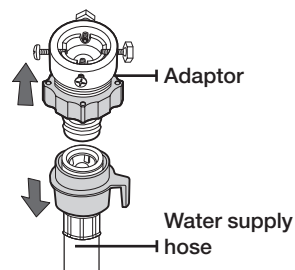


2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.

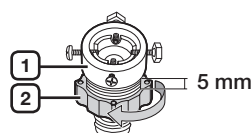


3. Connect the adaptor to the water tap by tightening the screws firmly while lifting the adaptor upwards. Turn part (2) following the arrow and connect (1) and (2).

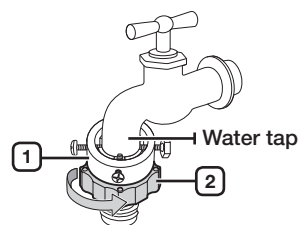

4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound. After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

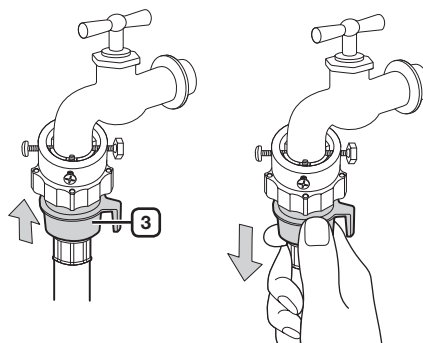


5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

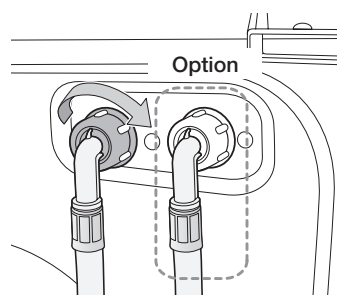


6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.



WARNING Do not use your washing machine if there is a water leak. This may cause electric shock or injury.

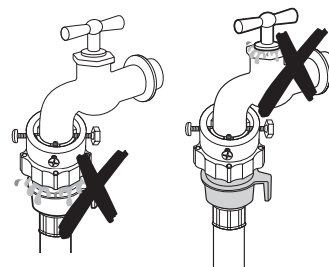

- If the water tap has a screw type tap, connect the water supply hose to the tap as shown.

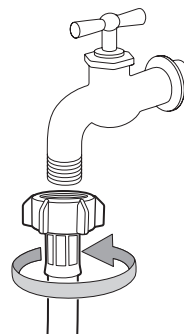


Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.

Connecting the Aqua Hose (Selected models)

The Aqua Hose was invented for perfect leakage protection. It is attached to the water supply hose and automatically cuts off the water flow if the hose is damaged. It also displays a warning indicator.

- Connect the water supply hose to the tap as shown.

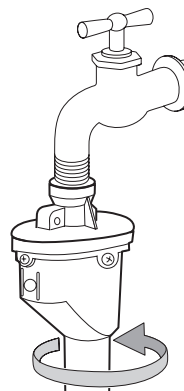


setting up your washing machine

Connecting the drain hose


The end of the drain hose can be positioned in three ways:

1. **Over the edge of a wash basin:** The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

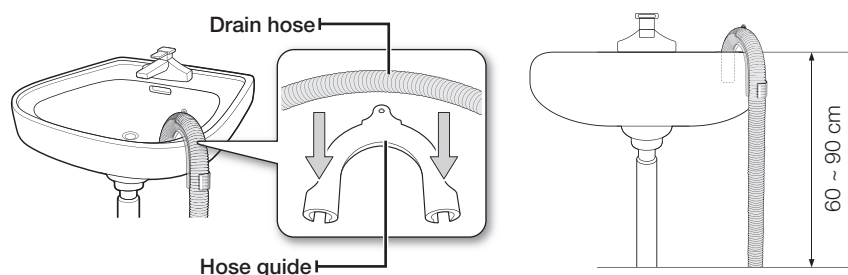

2. **In a sink drain pipe branch:** The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.
3. **In a drain pipe:** We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

-  The standpipe drain requires;
- minimum diameter 5 cm.
 - minimum carry-away capacity 60 liter per minute.

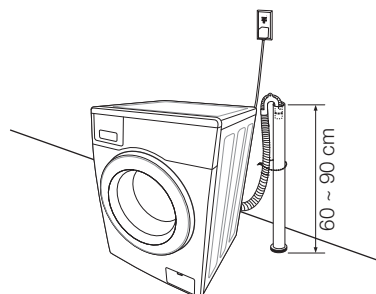

STEP 5

Powering your washing machine

Plug the power cord into a wall sockets, an AC 220-240V / 60Hz approved electrical outlet protected by a fuse or circuit breaker. (For more information on electrical and grounding requirements, see page 14.)

washing a load of laundry


With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME

 Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

1. Press the **Power** button.
2. Add a little detergent to the detergent compartment ① in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.

 This will remove any water that might be left over in the machine from the manufacturer's test run.

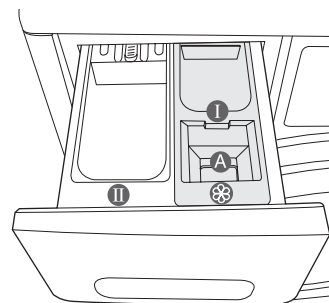

Compartment ①: Detergent for prewash, or starch.

Compartment ②: Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.

 To use liquid detergent, use the liquid detergent box (refer to page 31 of the manual for the corresponding model). Do not add powdered detergent into the liquid detergent box.

Compartment Ⓢ: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX) of "A")

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.

 **WARNING** Do not overload the washing machine. To determine the load capacity for each type of laundry, refer to the chart on page 30.

-  • Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not touch the door glass while your washing machine is running or it may be hot.
 - Do not open the detergent drawer or the debris filter while your washing machine is running or you might be exposed to hot water or steam.
 - Do not wash water-proofed items in normal cycle except outdoor care program.

2. Close the door until it latches.

3. Turn the power on.

4. Add detergent and additives to the dispenser drawer.


5. Select the appropriate cycle and options for the load.

The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.

6. Press the **Start/Pause** button.

washing a load of laundry

USING THE CONTROL PANEL

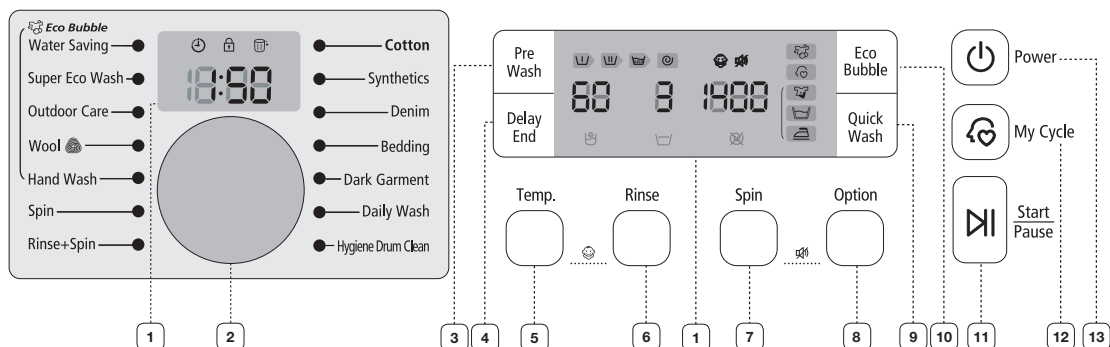

1 DIGITAL GRAPHIC DISPLAY

Displays the remaining wash cycle time, all cycle information, and error messages.

2 CYCLE SELECTOR

Select the tumble pattern and spin speed for the cycle.



For detailed information, refer to "Washing clothes using the cycle selector". (see page 28)

Cotton - For average or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc.

Synthetics - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends.

Denim - A higher water level in the main wash and extra rinse ensure that no washing powder remains that may mark your clothing.

Bedding - For bed spread, bed sheet, duvet cover etc.



Wash under 2kg and only 1 kind of bedding to achieve the best result.

Dark Garment - Additional rinses and reduced spinning ensure that your favourite dark clothes are washed gently and rinsed thoroughly.

Daily Wash - Use for everyday items such as underwear and shirts.

Hygiene Drum Clean - Use for drum cleaning. It cleanses dirt and bacteria of drum. Regular use (after every 40 washes) is recommended. No detergent or bleach needed.

Water Saving - This is a specially designed course that enables you to wash laundry effectively with the minimum amount of water.

Super Eco Wash - Low temperature Eco Bubble ensures that you achieve perfect wash results while allowing effective energy saving.

Outdoor Care - Use for outdoor wear such as mountain clothes, skiwear, and sports wear. Fabrics include functional technology finishes and fibers such as spandex, stretch, and micro-fiber.

	Wool - Only for machine-washable wool. A load should be less than 2.0 kg. - The wool course washes the laundry using gentle cradling actions. During the wash, the gentle cradling and soaking actions are continued to protect the wool fibers from shrinkage / distortion and for a super gentle clean. This stop operation is not a problem. - Neutral detergent is recommended for wool course, for improved washing results and for improved care of the wool fibers.  The wool wash cycle of this machine has been approved by Woolmark for the washing of machine-washable Woolmark products provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine, M1125 (Certificate Number issued by I.W.S. Nominee Co., Ltd.) Hand Wash - A very light wash cycle as gentle as a hand wash. Spin - Performs an additional spin cycle to remove more water. Rinse + Spin - Use for a load that needs rinsing only or to add rinse-added fabric softener to a load.				
3	PREWASH SELECTION BUTTON Press this button to select pre-wash. Pre-wash is only available with: Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Water Saving.				
4	DELAY END SELECTION BUTTON Press this button repeatedly to cycle through the available Delay End options (from 3 hours to 19 hours in one hour increments). The hour displayed indicates the time when the wash cycle will be finished.				
5	TEMPERATURE SELECTION BUTTON Press this button repeatedly to cycle through the available water temperature options: (Cold Water , 30 °C, 40 °C, 60 °C and 95 °C).				
6	RINSE SELECTION BUTTON Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.				
7	SPIN SELECTION BUTTON <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">WF0854</td><td>, 400, 800, 1200, 1400 rpm</td></tr> <tr> <td>WF0852</td><td>, 400, 800, 1000, 1200 rpm</td></tr> </table> “No spin ” - The laundry remains in the drum and no spin cycle is performed after the final drain.	WF0854	 , 400, 800, 1200, 1400 rpm	WF0852	 , 400, 800, 1000, 1200 rpm
WF0854	 , 400, 800, 1200, 1400 rpm				
WF0852	 , 400, 800, 1000, 1200 rpm				
8	OPTION SELECTION BUTTON Press this button repeatedly to cycle through the options: Easy Iron → Soak → Intensive → Easy Iron + Soak → Easy Iron + Intensive → Soak + Intensive → Easy Iron + Intensive + Soak → off “Easy Iron”: Use this option to prepare your laundry so that it can be easily ironed. “Soak”: Use this option to effectively remove stains from your laundry by soaking your laundry. - The Soak function is performed 13 minutes into the wash cycle. - The Soak function continues for 30 minutes with six cycles, where one cycle is a soak cycle that spins for 1 minute and stands still for 4 minutes. - The Soak function is only available for the following wash programs: Cotton, Synthetics, Denim, Bedding, Daily Wash, Water Saving. “Intensive”: Press this button when the laundry is heavily soiled and needs to be washed intensively. The cycle time is increased for each cycle.				

washing a load of laundry

9 QUICK WASH SELECTION BUTTON	For lightly soiled garments and less than 2kg laundry that you require quickly. It takes about minimum 15 minute, but can vary from the indicated values depending on water pressure, water hardness, water inlet temperature, room temperature, type and amount of washing and degree of soiling, utilized detergent unbalanced load, fluctuation in the electricity supply and extra options selected. Press this button repeatedly to choose cycle time: 15min → 20min → 30min → 40min → 50min → 60min → Off  Powdered/Liquid detergent should be under 20g(for 2kg load) or detergent may remain on the clothes.
10 ECO BUBBLE SELECTION BUTTON	Eco Bubble selection is turned on as a default. Press the Eco Bubble option button once to deselect and the Bubble Generator OFF (shown on the panel), press it again to turn the function back ON. - Some wash cycles must have Eco Bubble option ON (will show on the panel, and the Generator will turn on automatically). - Other wash cycles do not need this option and automatically turn the Generator OFF. - On many cycles, you can manually adjust this option, which will visibly affect wash time on the panel to achieve results (please see page 27 for more information).
11 START/PAUSE SELECTION BUTTON	Press to pause and restart a cycle.
12 MY CYCLE SELECTION BUTTON	Choose your favorite cycle including temperature, spin, soil level, option, etc.
13 POWER BUTTON	Press it once to turn your washing machine on, press it again to turn your washing machine off. If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

Child lock


The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp.** and **Rinse** buttons at the same time for 3 seconds. "Child Lock" will be lit when this feature is activated.



When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

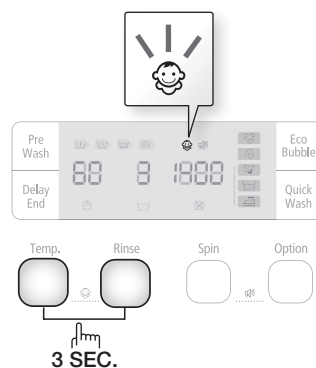


Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the Sound Off function, press the **Spin** and **Option** buttons at the same time for 3 seconds. The "Sound Off" will be lit when this feature is activated.

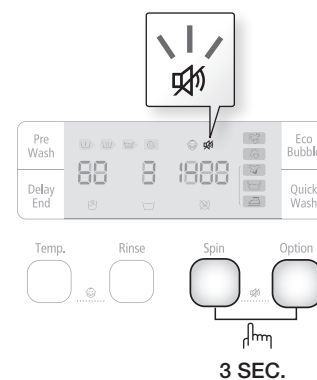

washing a load of laundry

Delay end

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 3 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished.

1. Manually or automatically set your washing machine according to the type of laundry you are washing.
2. Press the **Delay End** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The “**Delay End** ⌚” indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the **Power** button and then turn the washing machine on again.

My cycle

Allows you to activate your custom wash (temperature, spin, soil level, etc.) with one button convenience.

By pushing the **My Cycle** button, press the My Cycle button to load and use the saved My Cycle options. The “**My Cycle**” light will indicate activation. Also, the chosen course and option lights will flicker.

You can set all options as follows in the My Cycle mode.

1. Turn the water supply on.
2. Press the **Power** button.
3. Select cycle using the **Cycle Selector**.
4. After cycle selection, set each option.

 See the “Cycle Chart” on page 39 for available option settings with each cycle.

5. You can then store the selected cycle and options by pressing and holding the **My Cycle** button for longer than 3 seconds in My Cycle mode. The cycle and options you select will be displayed the next time you choose the My Cycle function.

 You can change the My Cycle settings by repeating the same process above. The last used setting will be displayed the next time you choose the My Cycle function.

 If you press My Cycle and release it within 3 seconds, the previously saved course and options appear. If you press and hold My Cycle for 3 second or longer, the currently set course and options are saved and the LED blinks for 3 seconds.

Eco Bubble

Eco Bubble allows detergent to distribute evenly and penetrate fabrics faster and deeper.

-  The bubble function is available in all courses except for Hygiene Drum Clean course and the function availability is as follows.


Course	Bubble function	Canceling the bubble function
Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash	Available	Available
Water Saving, Super Eco Wash, Outdoor Care, Wool, Hand Wash		Not available
Hygiene Drum Clean	Not available	-

- A different bubble function may be applied depending the course.

-  Eco Bubble selection is default. Press it once to deselect bubble option, press it again to select bubble option.

1. Open the door, place the laundry inside the wash tub and close the door.
2. Press the **Power** button.
3. Select a function.
4. Place the appropriate amount of detergent and fabric softener into the corresponding compartments depending on the amount of laundry and close the detergent drawer.

- Add the appropriate amount of detergent into the detergent compartment ①, and add the fabric softener to softener compartment ② just under the fiber softener base line (MAX) of "A"
- When the Prewash course is selected, add detergent into the prewash compartment ① as well.
- To use liquid detergent, leave the liquid detergent box in the drawer (refer to "Liquid Detergent" section on page 31).

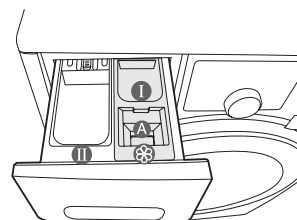

-  Do not add powdered detergent into the liquid detergent box.

5. Press the Start/Pause button.
 - Press the **Start/Pause** button to start the wash.
 - The amount of the laundry is automatically detected and the laundry is washed.
 - Once a washing machine operation begins, you cannot add or select the bubble function.

- 
- Enough bubbles are generated with the specified amount of detergent.
 - Please clean the Debris filter frequently. Periodic cleaning helps generate sufficient bubbles.
 - Depending on the detergent and the laundry, the bubbles may be absorbed and seem like a small quantity.
 - Although bubbles are generated once the wash begins, it may take several minutes for users to see them.

washing a load of laundry

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Turn on your sink's water tap.
2. Press the **Power** button.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling it.
5. Close the door.
6. Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.

 Pre-wash is only available when selecting the Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Water Saving cycles. It is only necessary if your clothing is heavily soiled.

7. Use the **Cycle Selector** to select the appropriate cycle according to the type of material: Cotton, Synthetics, Denim, Bedding, Dark Garment, Daily Wash, Water Saving, Super Eco Wash, Outdoor Care, Wool, Hand Wash. The relevant indicators will illuminate on the control panel.
8. At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
9. Press the **Start/Pause** button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

1. Press the **Start/Pause** button to unlock the door.

 The door cannot be opened when the water is too HOT or the water level is too HIGH.

2. After closing the door, press the **Start/Pause** button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the door.
2. Remove laundry.

Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

1. Turn the water supply on.
2. Press the **Power** button on the washing machine.
3. Open the door.
4. Load the articles loosely into the drum one at a time, without overfilling it.
5. Close the door.
6. Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
7. Press the **Temp.** button to select the temperature. (Cold water, 30 °C, 40 °C, 60 °C, 95 °C)
8. Press the **Rinse** button to select the required number of rinse cycles.
The maximum number of rinse cycles is five.
The wash duration is increased accordingly.
9. Press the **Spin** button to select the spin speed. (⊗ : No Spin)
10. Press the **Delay End** button repeatedly to cycle through the available Delay End options (from 3 hour to 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
11. Press the **Start/Pause** button and the machine will begin the cycle.

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.



Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new woollen items, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects.

Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing.

Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

washing a load of laundry

Determining the load capacity


Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity
Model	WF0854 / WF0852
Cotton - average/lightly soiled - heavily soiled	8.5 kg
Synthetics	3.0 kg
Denim	3.0 kg
Bedding	2.0 kg
Outdoor Wear	2.0 kg
Wool	2.0 kg

- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load. If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Duvet cover, the wash time may be lengthened or the spin efficiency may be degraded.
- For Bedding or Duvet cover, the recommended load capacity is 2.0 kg or less.

Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.

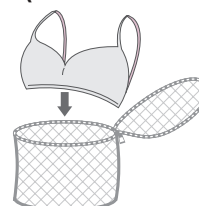

 **CAUTION** Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and cause an accident resulting in injury.

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use "low suds" laundry detergent, which is designed for automatic washing machines.

Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.

-  Do not use detergent that has hardened or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

Detergent drawer

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.

 Do not open the detergent drawer while your washing machine is running or you might be exposed to hot water or steam.

1. Pull out the detergent drawer on the left side of the control panel.



2. Add the recommended amount of laundry detergent directly into the detergent compartment ⑪ before starting your washing machine.

 To use liquid detergent, use the liquid detergent box (refer to “Liquid Detergent” for the corresponding model).

- Do not add powdered detergent into the liquid detergent box.

3. Add the recommended amount of fabric softener into the softener compartment ⑫ if required. DO NOT exceed the MAX FILL (A) line.

 **CAUTION** Do NOT add any powder/liquid **detergent** to the softener compartment (⑫).

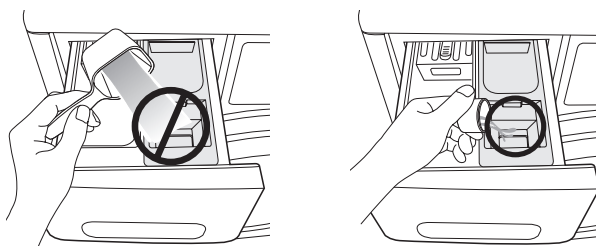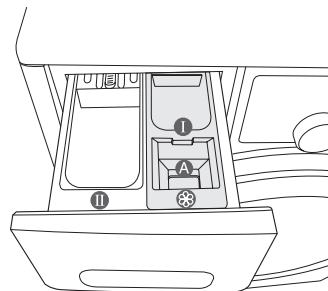


4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment ⑬.

 When washing large items do NOT use the following detergent types.

- Tablet and capsule type detergents
- Detergents using a ball and net

 Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked).


 Be careful that the fabric softener does not overflow, when you close the detergent drawer after adding fabric softener into the rinse detergent compartment.

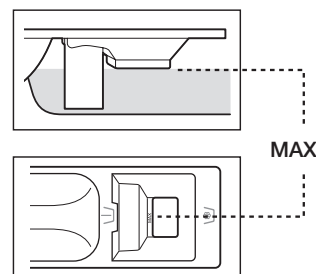

Liquid Detergent (Selected models)

To use liquid detergent, place the liquid detergent box into the main wash section of the detergent drawer and pour liquid detergent into the liquid detergent box.

-  DO NOT fill above the MAX line.
-  When using powdered detergent, remove the liquid detergent box from the detergent drawer. Powdered detergent will not dispense with liquid detergent box.
-  After a wash, some liquid may remain in the detergent drawer.

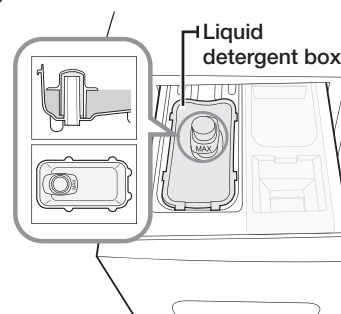

cleaning and maintaining your washing machine

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

HYGIENE DRUM CLEAN

This course is a self-cleaning course that removes mold that may occur inside the washing machine.


1. Press the **Power** button.
2. Turn the **Cycle Selector** to the Hygiene Drum Clean course.
 - You can only use the Delay End function.
 - The water temperature during the Hygiene Drum Clean is set to 70 °C.



You cannot change the temperature.



3. Place the appropriate amount of cleansing agent into the detergent compartment ① and close the detergent drawer (when cleaning the drum using a cleansing agent).
 - Be sure to use the recommended cleansing agent for cleaning the drum.
 - There are powder-type and liquid-type drum cleansing agents. The liquid-type cleaning agent is only available with liquid detergent box (option).

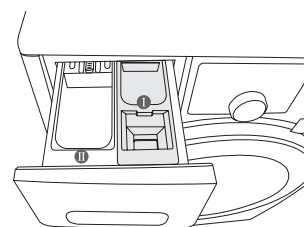

4. Press the **Start/Pause** button.
 - If you press the **Start/Pause** button, the Hygiene Drum Clean course begins.



CAUTION


- Using the Hygiene Drum Clean course, you can clean the drum without using a cleansing agent.
- Never use the Hygiene Drum Clean course when laundry is in the washing machine. This may result in damage to the texture or a problem with the washing machine.
- **In the Hygiene Drum Clean course, never use normal detergent.**
- **Use only 1/10 of the amount of the drum cleansing agent recommended by the cleansing agent manufacturer.**
- Since using a chlorine bleaching agent may discolour the product, be sure to use only oxygen bleaching agents.
- Powder-type cleansing agent: Use a [powder-type bleaching agent] or a [cleansing agent for drum cleaning only].
- Liquid-type cleansing agent: Use a [liquid-type oxygen bleaching agent] or a [cleansing agent for drum cleaning only].

The Hygiene Drum Clean Auto Alarm Function

- If the “Hygiene Drum Clean” indicator on the display and the lamp on the Cycle Selector are lit after a wash, it indicates that tub (drum) cleaning is required. In this case, remove the laundry from the washing machine, turn the power on, and clean the drum by performing the Hygiene Drum Clean course.
- If you do not perform the Hygiene Drum Clean course, the “Hygiene Drum Clean” indicator on the display and the lamp on the Cycle Selector are turned off. However, the “Hygiene Drum Clean” indicator on the display and the lamp on the Cycle Selector are turned on again after two washes are performed. However, this will not result in a problem with the washing machine.
- Although generally, the Hygiene Drum Clean Auto Alarm appears once a month or so, the frequency may differ depending on the number of times the washing machine is used.




- **In case of the alarm, please also clean the debris filter (refer to “Cleaning the debris filter” section on page 34). Otherwise the performance of the bubble function may lower down.**

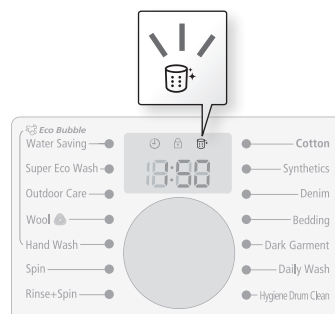


DRAINING THE WASHING MACHINE IN AN EMERGENCY

1. Unplug the washing machine from the power supply.
2. Open the filter cover by pressing down and pulling its handle.

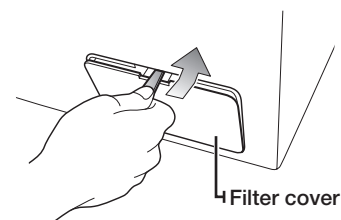

3. Open the emergency drain cap by pulling it.

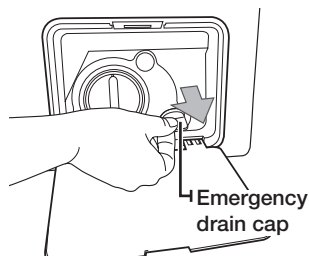


4. Hold the cap on the end of the emergency drain tube and slowly pull it out about 15 cm.
5. Allow all the water to flow into a bowl.



Remain water maybe more than you expected. Prepare larger bowl.

6. Reinsert the emergency drain cap and the drain tube.
7. Replace the filter-cover.

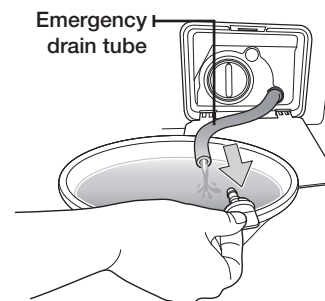

cleaning and maintaining your washing machine


CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of “5E” is displayed. (Refer to “Draining the washing machine in an emergency” in the previous section.) If foreign substances accumulate debris filter, the performance of the bubble function will be degraded.



Before cleaning the debris filter, make sure to unplug the power cord.


1. Remove the remaining water first (refer to “Draining the washing machine in an emergency” on page 33.)
 - ☞ If you separate the filter without draining the remaining water, the remaining water may trickle out.
2. Open the filter cover by using a key or coin.
3. Unscrew the emergency drain cap by turning it to the left and drain off all the water.
4. Unscrew the debris filter cap.
5. Wash any dirt or other material from the debris filter. Make sure the drain pump propeller behind the debris filter is not blocked.
6. Replace the debris filter cap.
7. Replace the filter cover.

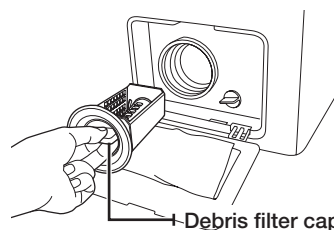

Do not open the debris filter cap while the machine is running or hot water may flow out.



- Make sure to replace the filter cap after the filter cleaning. If the filter is out of the machine, your washing machine may malfunction or leak water.
- The filter should be fully assembled after the filter cleaning.

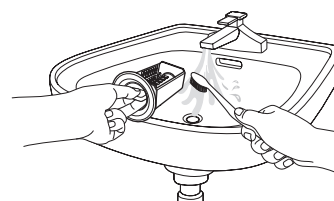


CLEANING THE EXTERIOR


1. Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water onto the washing machine.

CLEANING THE DETERGENT DRAWER AND DRAWER RECESS


1. Press the release lever on the inside of the detergent drawer and pull the drawer out.
2. Remove the softener divider and the liquid detergent box(option) from the detergent drawer.

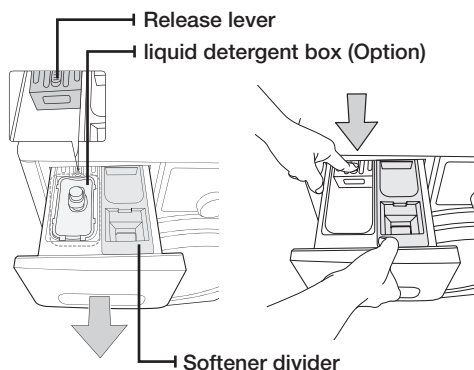

3. Wash all parts under running water.

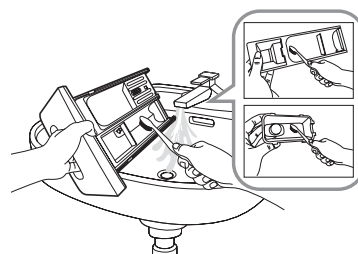

4. Clean the drawer recess with an old toothbrush.
5. Replace the softener divider and the liquid detergent box (option) by pushing it firmly into the drawer.
6. Push the drawer back into place.
7. To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.

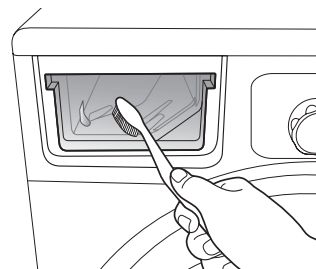

CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of “4E” is displayed:

1. Turn off the water supply to the washing machine.
2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
3. Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Make sure the connections are watertight and turn on the tap.

cleaning and maintaining your washing machine

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water over the tap to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it's better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

1. Select the **Cotton** cycle and add bleach to the bleach compartment. Then, push the **Quick Wash** button and run your washing machine through the cycle without a load.
2. Turn the water taps off and disconnect the inlet hoses.
3. Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.



If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	• Make sure your washing machine is plugged in. • Make sure the door is firmly closed. • Make sure the water source tap(s) are turned on. • Make sure to press the Start/Pause button.
Has no water or not enough water	• Turn the water tap on fully. • Make sure the water source hose is not frozen. • Straighten the water intake hoses. • Clean the filter on the water intake hose.
Has detergent remaining in the detergent drawer after the wash cycle is complete	• Make sure your washing machine is running with sufficient water pressure. • Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	• Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Straighten the drain hose. Eliminate kinked hoses. • Make sure the debris filter is not clogged.
Door is locked shut or will not open.	• The door will not open until 3 minutes after the machine stops or the power turns off.

If the problem persists, contact your local Samsung Customer Service.

troubleshooting and information codes

INFORMATION CODES

If your washing machine malfunctions, you may see an information code on the display. If this happens, please check the table below and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	• Make sure the door is firmly closed. • Make sure that laundry is not caught in the door.
4E	• Make sure the source water tap is turned on. • Check the water pressure. • Clean the mesh filters of water hose.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly. • Clean the water hose mesh filter.
UE	• The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an "UE" error message will be shown in the display window.
cE/3E/Uc	• Call the after-sales service.

For any codes not listed above, or if the suggested solution doesn't fix the problem, call your Samsung Service Centre or local Samsung dealer.

cycle chart

CYCLE CHART

(● user option)

PROGRAM	Max load(kg)	DETERGENT			Max Temp (°C)	Spin Speed(MAX) rpm	
		Pre-wash	wash	Softener		WF0854	WF0852
Cotton	8.5	●	yes	●	95	1400	1200
Synthetics	3.0	●	yes	●	60	1200	1200
Denim	3.0	●	yes	●	60	800	800
Bedding	2.0	●	yes	●	40	800	800
Dark Garment	4.0	●	yes	●	40	1200	1200
Daily Wash	3.0	●	yes	●	60	1400	1200
Hygiene Drum Clean	-	-	-	-	70	400	400
Water Saving	8.5	●	yes	●	60	1400	1200
Super Eco Wash	4.0	-	yes	●	40	1200	1200
Outdoor Care	2.0	-	yes	●	40	1200	1200
Wool	2.0	-	yes	●	40	800	800
Hand Wash	2.0	-	yes	●	40	400	400

PROGRAM	Eco Bubble	Intensive	Soak	Easy Iron	Delay end	Quick Wash	Cycle time (min)
Cotton	●	●	●	●	●	●	110
Synthetics	●	●	●	●	●	-	80
Denim	●	●	●	●	●	-	68
Bedding	●	●	●	●	●	-	87
Dark Garment	●	●	-	●	●	-	73
Daily Wash	●	-	●	●	●	-	54
Hygiene Drum Clean	-	-	-	-	●	-	86
Water Saving	●	●	●	●	●	-	135
Super Eco Wash	●	●	-	●	●	-	92
Outdoor Care	●	-	-	-	●	-	77
Wool	●	-	-	-	●	-	55
Hand Wash	●	-	-	-	●	-	31

1. A cycle with a prewash takes approx. 15 minutes longer.
2. The cycle duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456.
3. Cotton 60°C + intensive + Eco bubble are programs according to EN60456.
4. Daily Wash : Short program for test institutes.
5. Course time in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
6. When the Intensive Wash function is selected, the cycle time is increased for each cycle.
7. The energy label specifications have been determined by using the following program according to SASO 2692 and SASO 2693.
 - The program is Water Saving 40, 3 Rinses, Intensive, and 1400rpm.

appendix

FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing (and dry cleaning when necessary). The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundry problems.

	Resistant material		Can be ironed at 100 °C max
	Delicate fabric		Do not iron
	Item may be washed at 95 °C		Can be dry cleaned using any solvent
	Item may be washed at 60 °C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item may be washed at 40 °C		Dry clean with aviation fuel, pure alcohol or R113 only
	Item may be washed at 30 °C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 °C max		Tumble dry, reduced heat
	Can be ironed at 150 °C max		Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufactures' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

SPECIFICATIONS

TYPE		FRONT LOADING WASHING MACHINE	
DIMENSIONS		WF0852 / WF0854	
		W598mm X D600mm X H844mm	
WATER PRESSURE		50 kPa ~ 800 kPa	
WATER VOLUME		52 ℓ	
NET WEIGHT		WF0852 / WF0854	
		67 kg	
WASH AND SPIN CAPACITY		8.5 kg	
POWER CONSUMPTION	MODEL		WF0852 / WF0854
	WASHING	220 V	150 W
		240 V	150 W
	WASH AND HEATING	220 V	2000 W
		240 V	2400 W
	SPIN	MODEL	
		230V	
	PUMPING		34 W
PACKAGE WEIGHT	MODEL		WF0852 / WF0854
	PAPER		1.9 kg
	PLASTIC		2.3 kg
SPIN REVOLUTIONS	MODEL		WF0854 WF0852
	rpm		1400 1200

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

memo

memo



QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
Saudi Arabia	9200-21230	www.samsung.com

Code No. DC68-02938D-01_EN

WF0852W8(E/N/S/V/W)
WF0854W8(E/N/S/V/W)
WF0852Y8(E/N/S/V/W)
WF0854Y8(E/N/S/V/W)



غسالة الملابس

دليل المستخدم

Planet First 100%
Recycled Paper

تم إنتاج هذا الدليل باستخدام ورق معاد تدويره بنسبة 100%.

إمكانات هائلة

نشكرك على شراء هذا المنتج من Samsung.
للحصول على خدمة أكثر تكاملاً، الرجاء تسجيل المنتج على الموقع

www.samsung.com/register

SAMSUNG

مميزات غسالة الملابس الجديدة من Samsung

ستغير هذه الغسالة الجديدة رؤيتك لعملية الغسيل. حيث تتوفر بغسالة Samsung كافة الميزات التي تجعل عملية الغسل عملية سهلة وممتعة قدر الإمكان بدءًا من وظيفة Eco Bubble (الفقاعات صديقة البيئة) المخصصة لانتهاج توفير الطاقة.

• Energy Saving (توفير الطاقة)

يوفر هذا الطراز استهلاك أوفر للطاقة مقارنةً بمثيلاتها من الفئة A وذلك بفضل "نظام مُولد الفقاعات" و "محرك التشغيل الهادي العكسي".

• Eco Bubble Wash (غسل بالفقاعات صديق البيئة)

يوفر نظام Eco Bubble Wash (الفقاعات صديقة البيئة) الفعّال من Samsung نظافة أفضل مع عناية متقدمة بالأقمشة. كما يسمح بتوزيع المسحوق بالتساوي وتخلله داخل الملابس بشكلٍ أسرع وأعمق.

• Quick Wash (الغسل السريع)

وداعاً لإهدار الوقت! يساعد برنامج Quick Wash (الغسل السريع) إذا كانت حباتك مزدحمة بالمهام - حيث يمكنك الآن غسل ملابسك المفضلة (حتى ٢ كجم) خلال ١٥ دقيقة!

• Quiet Drive Motor (محرك التشغيل الهادي)

تتميز غسالة Samsung بـ Quiet Drive Motor (محرك التشغيل الهادي) الذي يعمل بدون سيور أو تروس. مما يقلل من الاهتزاز ويجعل الغسالة أكثر هدوءًا ومناقة.

• Eco Drum Clean (تنظيف الحاوية صديق البيئة)

تساعد ميزة Eco Drum Clean (تنظيف الحاوية صديق البيئة) في الحفاظ على نظافة الغسالة حتى بدون استخدام أي منظفات أو مواد تبييض. حيث يمكنك الحفاظ على نظافة الحاوية ورائحتها مع هذا البرنامج المخصص للتنظيف.

• Baby Care (العناية بملابس الأطفال)

تتضمن غسالة Samsung ببرامج غسل تعمل على حماية ملابس الأطفال ذوي البشرة الحساسة. حيث تم إعداد هذه البرامج لتقليل التهابات البشرة عند الأطفال عن طريق تقليل بقايا مسحوق الغسل. بالإضافة إلى أن هذه البرامج تصنف الملابس إلى أنواع مختلفة يتم غسلها وفقًا لخصائص كل نوع بحيث يشعر الأطفال بالانتعاش من نظافة الملابس وقتما يرتدونها.

• Wool Certified (غسل المنتجات الصوفية المعتمدة من شركة Woolmark)

تم اختبار هذه الغسالة حيث اجتازت المواصفات التي حددتها شركة Woolmark لغسل المنتجات الصوفية في الغسالة. وتُعد هذه العلامة هي الاعتماد الذي تم ترقيته وهو أفضل من علامة Woolmark الحالية. بما يضمن توفير الأداء الفائق للغسالة والعناية بأقمشة المنتجات الصوفية. يجب غسل الملابس وفقًا للإرشادات المدونة على الملصق الموجود على الملابس كما حددتها شركتي Woolmark و Samsung.

• Hand Wash (الغسل اليدوي)

يمكنك أن تحظى بعناية خاصة بغسل ملابسك عن طريق تحديد درجة حرارة ملائمة ودورة غسيل هادئة وكمية ماء مناسبة.

• Delay End (تأجيل التوقف)

تعمل هذه الميزة على تأجيل الدورة حتى ١٩ ساعة بزيادة ساعة واحدة كما تعمل على زيادة الراحة عند استخدام الغسالة لاسيما عندما ترغب في الذهاب للخارج.

• Child Lock (التأمين ضد عبث الأطفال)

تضمن وظيفة Child Lock (التأمين ضد عبث الأطفال) الحفاظ على الغسالة ضد عبث الأطفال. وتعمل ميزة الأمان هذه على منع الأطفال من العبث بتشغيل الغسالة. كما تقوم بتبنيها عند تشغيلها.

• Digital Graphic Display (لوحة عرض رسومية رقمية)

تتميز لوحة تحكم Digital Graphic Display (لوحة العرض الرسومية الرقمية) ببوضوحها وسهولة استخدامها مما يعمل على تقليل الضوضاء والمقاطعة إلى أدنى حد. بالإضافة إلى سهولة التشغيل التي تتيح لك "لوحة العرض الرسومية الرقمية" إجراء عمليات الضبط بسرعة وبدقة للحصول على نتائج غسل فائقة.

• Wide door (باب واسع)

فتحة عريضة جدًا للباب لمشاهدة عملية الغسل بشكل مريح! حيث أنه يسمح بإضافة قطع الملابس وإخراجها بسهولة. وخصوصًا القطع كبيرة الحجم. مثل المفروشات والمناشف إلى آخره.

يحتوي هذا الدليل على معلومات هامة حول عملية التركيب والاستخدام والعناية بغسالة Samsung الجديدة. يمكنك الرجوع إليه للتعرف على شكل لوحة التحكم، والتعليمات الخاصة بكيفية استخدام الغسالة. بالإضافة إلى التلميحات المتعلقة بالوصول إلى أقصى استفادة من أحدث الميزات والوظائف المتوفرة بها. يرشدك القسم "استكشاف المشاكل وحلها ورموز المعلومات" في صفحة ٣٧ إلى ما يجب عليك فعله في حالة حدوث عطل بغسالتك الجديدة.

معلومات السلامة

تهانينا على شرائك غسالة Samsung الجديدة. يحتوي هذا الدليل على معلومات هامة حول عملية تركيب الجهاز واستخدامه والعناية به. يرجى قراءة هذا الدليل بعناية لتتمكن من الاستفادة الكاملة من الميزات والفوائد العديدة لغسالتك.

ما يجب أن تعرفه حول إرشادات السلامة

يرجى قراءة هذا الدليل بعناية للتأكد من معرفة كيفية تشغيل الميزات والوظائف المتعددة لجهازك الجديد بسلامة وفعالية. كما يجب الاحتفاظ به في مكان آمن بالقرب من الجهاز للرجوع إليه في المستقبل. استخدم هذا الجهاز للغرض المخصص لها فقط على النحو الموضح في دليل الإرشادات الذي بين يديك.

لا تغطي التحذيرات وإرشادات السلامة الهامة الواردة في هذا الدليل "ل" كافة الظروف والمواقف المحتمل حدوثها. لذا يقع على عاتقك مسؤولية اتباع المنطق السليم والتعامل بحذر ومراعاة الانتباه عند تركيب الغسالة وصيانتها وتشغيلها. نظراً لأن إرشادات التشغيل التالية تنطبق على طرز متعددة، فإن خصائص الغسالة التي تستعملها قد تختلف قليلاً عن تلك الموصوفة في هذا الدليل. كما أن بعض علامات التحذير المذكورة قد تكون غير قابلة للتطبيق. إذا كانت لديك أي أسئلة أو مخاوف، اتصل بأقرب مركز خدمة أو ابحث عن التعليمات والمعلومات عبر الإنترنت على موقع www.samsung.com.

الرموز والاحتياطات الهامة للسلامة

تشير الرموز والعلامات الموجودة في دليل المستخدم الذي بين يديك إلى ما يلي:

الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى إصابات خطيرة للأشخاص وأو الموت وأو تلف في الممتلكات.	 تحذير
الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى إصابات للأشخاص وأو تلف في الممتلكات.	 تنبيه
لتقليل احتمال حدوث خطر الحريق أو الانفجار أو الصدمات الكهربائية أو الإصابة الجسدية أثناء استخدام الغسالة، اتبع احتياطات السلامة الأساسية التالية:	 تنبيه
لتفادي خطر نشوب حريق أو انفجار، اتبع هذه الاحتياطات الأساسية.	 تنبيه
منع المحاولة.	
منع الفك.	
منع اللمس.	
اتبع الإرشادات بعناية.	
قم بفصل قابس التيار الكهربائي من مقبس الحائط.	
تأكد من توصيل الغسالة بأرضي لمنع حدوث صدمة كهربائية.	
اتصل بمركز الخدمة للحصول على تعليمات.	
ملاحظة	

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللآخرين.

لذا يرجى اتباعها بعناية.

بعد قراءة هذا الدليل، قم بحفظه في مكان آمن للاستناد إليه كمرجع في المستقبل.

اقرأ كافة الإرشادات أولاً قبل استخدام الجهاز.



يوجد احتمال التعرض للمخاطر، كما هو الحال أثناء استخدام الطاقة الكهربائية والأجزاء المتحركة، ولتشغيل هذا الجهاز بأمان، يجب عليك التعرف على طريقة تشغيله وتوخي الحذر أثناء استخدامه.

لا تدع الأطفال (أو الحيوانات الأليفة) يلعبون فوق الغسالة أو بداخلها. حيث لا يمكن فتح باب الغسالة بسهولة من الداخل، وقد يصاب الأطفال بإصابات بالغة في حالة احتباسهم بداخلها.

لم يتم تصميم هذا الجهاز للاستخدام من قبل أشخاص لديهم قدرات جسدية أو عقلية أو حسية محدودة (بما فيهم الأطفال) أو نقص في المعرفة أو الخبرة، إلا تحت إشراف أو توجيه فيما يخص استخدام هذا الجهاز من قبل الشخص المسؤول عن سلامتهم.



يجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.

في حالة تلف القابض (سلك التيار الكهربائي)، يجب تغييره من قبل الشركة المصنّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتفادي التعرض لأي خطر.

يجب وضع الجهاز بالقرب من قابض التيار الكهربائي، وصنابير توريد الماء وخراطيم تصريف الماء، بحيث يسهل الوصول إليها.

بالنسبة للغسالات التي تحتوي على فتحات تهوية بقاعدتها، تأكد من عدم سد السجاد أو أية عوائق أخرى لهذه الفتحات.

يُنصح باستخدام مجموعة خراطيم جديدة وعدم استخدام الخراطيم القديمة مرة أخرى.

معلومات السلامة

علامات التحذير الصارمة الخاصة بالتركيب




- يجب تركيب هذا الجهاز بواسطة فني مؤهل أو شركة صيانة متخصصة.
- يؤدي الفشل في اتباع هذه التعليمات إلى حدوث صدمة كهربية أو حريق أو انفجار أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.
- يجب توخي الحذر عند رفع الجهاز لأن وزنه ثقيل
- قم بتوصيل سلك الطاقة بمقبس حائط بجهد من ٢٢٠ إلى ٢٤٠ فولت / ٦٠ هرتز أو أعلى من ذلك، ولا تستخدم المقبس إلا لتشغيل هذا الجهاز فقط. بالإضافة إلى ذلك يجب عدم استخدام سلك تمديد.
- قد تؤدي مشاركة مقبس الحائط مع أجهزة أخرى باستخدام مشترك كهرباء أو مد سلك التيار الكهربائي إلى حدوث صدمة كهربية أو نشوب حريق.
- تأكد من تطابق كل من الجهد الكهربائي والتردد والتيار مع القياسات الخاصة بمواصفات المنتج. يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق. لذا تأكد من توصيل سلك الطاقة في مقبس الحائط بإحكام.
- قم بإزالة أي مواد غريبة، مثل الأتربة أو الماء من النهايات الطرفية لمقبس التيار الكهربائي ونقاط الاتصال باستخدام قطعة قماش جافة بانتظام.
- افصل قابس التيار الكهربائي ونظفه باستخدام قطعة قماش جافة.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.
- قم بإدخال قابس التيار الكهربائي في مقبس الحائط في الاتجاه الصحيح بحيث يكون اتجاه السلك نحو الأرضية.
- إذا قمت بإدخال قابس الطاقة في المقبس في الاتجاه المعاكس، فقد تلف الأسلاك الكهربائية الموجودة داخل الكبل وقد يؤدي هذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.
- احتفظ بجميع مواد التعبئة والتغليف بعيدة تمامًا عن متناول الأطفال. نظرًا لأنها قد تمثل خطورة على الأطفال.
- قد يؤدي وضع الطفل لكيس من أكياس التغليف فوق رأسه إلى إصابته بالاختناق.
- في حالة تلف الجهاز أو قابس التيار الكهربائي أو سلك التيار الكهربائي، اتصل بأقرب مركز صيانة.



- يجب توصيل الجهاز بالأرضي بشكل سليم.
- ولا تقم بتوصيل الجهاز بالأرضي بالقرب من أنبوب غاز أو أنبوب ماء بلاستيكي أو سلك تليفون.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار أو مشاكل بالمنتج
- يجب عدم توصيل سلك التيار الكهربائي بمأخذ لم يتم توصيله بأرضي بشكل صحيح، وتأكد من أن ذلك يتم وفقًا للمواصفات المحلية والقومية.



- يجب عدم تركيب هذا الجهاز بالقرب من سخان أو مواد قابلة للاشتعال.
- كما يجب عدم تركيب هذا الجهاز في بيئة رطبة أو موقع به زيت أو أتربة أو في مكان يتعرض لضوء الشمس المباشر والماء (قطرات المطر).
- يجب عدم تركيب هذا الجهاز في مكان درجة حرارته منخفضة
- قد يؤدي الجليد إلى انفجار الأنابيب
- يجب عدم تركيب هذا الجهاز في موقع قد يكون به تسرب للغاز.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.
- لا تستخدم محول كهربائي.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.
- لا تستخدم قابس تيار كهربائي أو سلك تيار كهربائي تالف أو مقبس حائط غير مُحكم.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.
- يجب عدم جذب سلك التيار الكهربائي أو ثنيه بقوة.
- يجب عدم لف سلك الطاقة أو طيه.
- يجب عدم تعليق سلك الطاقة فوق شيء معدني أو وضع شيء ثقيل فوق سلك التيار الكهربائي أو تمرير سلك التيار الكهربائي بين أشياء أو دفع سلك التيار الكهربائي في المساحة الموجودة خلف الجهاز.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.



- يجب عدم جذب سلك الطاقة عند فصل قابس التيار الكهربائي.
- يجب فصل قابس التيار الكهربائي عن طريق الإمساك بالقابس.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.
- لا تضع سلك الطاقة والأنابيب في مكان قد يعرضك للسقوط فوقها.



علامات التنبيه الخاصة بالتركيب





- يجب وضع هذا الجهاز بطريقة يمكن من خلالها الوصول إلى قابس التيار الكهربائي.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق نتيجة لتسريب الكهرباء.
- يجب تركيب الجهاز على أرضية مستوية وصلبة تتحمل وزن الجهاز.
- يؤدي الفشل في اتباع هذه التعليمات إلى وجود اهتزازات أو تحركات أو ضوضاء أو مشاكل غير طبيعية مع المنتج.



علامات التحذير الصارمة الخاصة بالاستخدام



- إذا فاض الجهاز بالماء، قم بإيقاف تشغيل المياه وقطع اتصال الكهرباء بشكل فوري واتصل بأقرب مركز صيانة.
- لا تلمس سلك التيار الكهربائي بأيدي مبتلة.
- قد يؤدي عدم الالتزام بذلك إلى حدوث صدمة كهربائية.
- في حالة إصدار الجهاز لضوضاء غير طبيعية أو رائحة اشتعال أو دخان، قم بفصل قابس التيار الكهربائي فوراً واتصل بأقرب مركز صيانة.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.
- في حالة وجود تسريب للغاز (مثل غاز البروبان أو الغاز النفطي المسال وما إلى ذلك)، يجب تهوية المكان فوراً بدون لمس قابس التيار الكهربائي. لا تقم بلمس الجهاز أو سلك الطاقة.
- لا تستخدم مروحة تهوية.
- قد ينتج عن الشرارة حدوث صدمة كهربية أو نشوب حريق.
- لا تدع الأطفال يلعبون فوق الغسالة أو بداخلها. كذلك، يجب فصل حامل باب الغسالة عند التخلص من الجهاز.
- في حالة الانحنسار داخل الغسالة، قد يتعرض الطفل للاختناق والاختناق حتى الموت.
- تأكد من إزالة الغلاف (الإسفنج، القوم) الموجود أسفل الغسالة قبل الاستخدام.



معلومات السلامة

- ❑ يجب عدم غسل العناصر العالق بها الجاز أو الكبروسين أو البنزين أو مرقق الطلاء أو الكحول أو أي مواد أخرى قابلة للاشتعال أو الانفجار.
 - قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار.
- يجب عدم فتح باب الغسالة بالقوة أثناء التشغيل (الغسيل/التجفيف/التنشيف عند درجة حرارة عالية).
 - قد ينتج عن اندفاع الماء خارج الغسالة الإصابة بالحروق أو التسبب في أن تصبح الأرض زلقة.
- قد ينتج عن هذا الأمر حدوث إصابات.
 - قد يؤدي فتح الباب بالقوة إلى تلف المنتج أو حدوث إصابة.
- يجب عدم وضع يديك تحت الغسالة.
 - قد ينتج عن هذا الأمر حدوث إصابات.
- لا تلمس قابس التيار الكهربائي بأيدي مُبتلة.
 - قد ينتج عن هذا الأمر الإصابة بصدمة كهربية.
- يجب عدم إيقاف تشغيل الغسالة من خلال فصل قابس التيار الكهربائي أثناء تشغيلها.
 - قد يؤدي إدخال قابس التيار الكهربائي مرة أخرى في مأخذ الحائط إلى حدوث شرارة ينتج عنها إصابة بصدمة كهربية أو نشوب حريق.
- يجب عدم السماح للأطفال أو الأفراد غير المؤهلين باستخدام هذه الغسالة بدون إشراف. يجب عدم السماح للأطفال بالتسلق فوق الغسالة.
 - قد يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حروق أو إصابات.
- لا تضع يديك أو أي كائن معدني أسفل الغسالة أثناء تشغيلها.
 - قد ينتج عن هذا الأمر حدوث إصابات.
- يجب عدم فصل الجهاز عن طريق جذب سلك الطاقة. يجب إمساك سلك الطاقة بإحكام وسحبه بشكل مستقيم من المنفذ إلى الخارج.
 - قد يؤدي تلف السلك إلى حدوث عطل تماس و/أو حريق و/أو صدمة كهربية

- ❑ لا تحاول إصلاح الجهاز أو فكّه أو تعديله بنفسك.
 - يجب عدم استخدام أي منصهر (مثل النحاس أو سلك معدني. وما إلى ذلك) خلاف المنصهر القياسي.
 - في حالة وجود حاجة لإصلاح الجهاز أو إعادة تركيبه. اتصل بأقرب مركز صيانة إلبك.
 - قد ينتج عن الفشل في اتباع هذه التعليمات حدوث صدمة كهربية أو نشوب حريق أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

- ➡ عندما يصبح خرطوم توريد الماء غير مُحكم وينتج عنه وجود تسريب للماء في الجهاز. يجب إلغاء توصيل سلك الطاقة.
 - يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.
- يجب فصل قابس التيار الكهربائي عندما يكون الجهاز قيد الاستخدام لفترات طويلة أو أثناء العواصف الرعدية أو البرق.
 - يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.



علامات التنبيه الخاصة بالاستخدام



- عندما يعلق بالغسالة مادة غريبة مثل المنظفات أو الأتربة أو مخلفات الطعام وما إلى ذلك، قم بفصل قابس التيار الكهربائي وتنظيف الغسالة باستخدام قطعة قماش مبللة وناعمة.
- يؤدي الفشل في الالتزام بهذا الأمر إلى وجود تغيير في الألوان أو التشويه أو التلف أو الصدأ.
 - قد ينكسر الزجاج الأمامي نتيجة حدوث اصطدام قوي. يجب الحرص عند استخدام الغسالة.
 - قد تحدث إصابة عندما ينكسر الزجاج.
 - عند حدوث فشل في توريد الماء أو عند إعادة توصيل خرطوم توريد الماء، يجب فتح الصنبور ببطء يجب فتح الصنبور ببطء في حالة عدم الاستخدام لفترة طويلة.
 - قد يؤدي وجود ضغط الهواء في خرطوم توريد الماء أو أنبوب الماء إلى تلف جزء من الغسالة أو وجود تسرب للماء.
 - في حالة حدوث خطأ يتعلق بالتصريف أثناء التشغيل، تحقق من وجود مشكلة تتعلق بالتصريف.
 - قد يؤدي استخدام الغسالة أثناء تسرب المياه منها نتيجة وجود مشكلة بالتصريف إلى الإصابة بصدمة كهربية أو نشوب حريق نتيجة تسرب كهربائي.
 - يجب إدخال الملابس بالكامل في الغسالة بحيث لا تتعلق بالباب.
 - قد يؤدي تعلق الملابس بالباب إلى تلف الملابس أو الغسالة، كما قد ينتج عنه حدوث تسرب للماء.
 - تأكد من إيقاف تشغيل الصنبور في حالة عدم استخدام الغسالة.
 - تأكد من ربط مسمار وصلة خرطوم توريد الماء القلاووظ بإحكام.
 - يؤدي الفشل في الالتزام بهذا الأمر إلى تلف الجهاز أو حدوث إصابات.
 - تأكد من عدم التصاق أي مواد غريبة بالحاجز المطاطي و زجاج الباب الأمامي (مثل مخلفات، خيوط أو شعر وما إلى ذلك)
 - في حالة التصاق أي مادة غريبة في الباب أو لم يتم إغلاق الباب جيداً، قد يتسبب ذلك في حدوث تسرب للماء.
 - يجب فتح الصنبور والتحقق من إحكام موصل خرطوم توريد الماء وعدم وجود تسرب للماء قبل استخدام المنتج.
 - في حالة عدم إحكام المسامير أو موصل خرطوم توريد الماء، قد يحدث تسرب للماء.
 - لتقليل مخاطر حدوث حريق أو انفجار:
 - في بعض الحالات، قد يتكون غاز الهيدروجين عند استخدام برنامج الماء الساخن - كما هو الحال بالنسبة لسخان الماء الساخن الذي لم يُستخدم لمدة أسبوعين أو أكثر. غاز الهيدروجين قابل للانفجار. وفي حالة عدم استخدام برنامج الماء الساخن لمدة أسبوعين أو أكثر، قم بفتح كافة صناديق الماء الساخن الموجودة في المنزل، ودع الماء يتدفق لبضعة دقائق قبل استخدام الغسالة. حيث يعمل ذلك على التخلص من غاز الهيدروجين الذي تم تكوينه داخل الصناديق. بما أن غاز الهيدروجين قابل للاشتعال، يجب عدم التدخين أو إشعال أي شعلة في هذا الوقت. يجب تهوية الحجرة على الفور قبل لمس قابس الطاقة في حالة تسرب الغاز.
 - المنتج الذي قمت بشرائه مصمم للاستخدام المنزلي فقط.
 - يعد استعمال المنتج لأغراض تجارية بمثابة إساءة استعمال للمنتج.
 - في هذه الحالة، لن يتم شمول المنتج بواسطة الضمان القياس الوارد من قبل سامسونج ولن تتحمل شركة سامسونج أي مسؤولية حيال الأعطال أو الأضرار الناجمة عن مثل سوء الاستعمال هذا.

معلومات السلامة

- ❑ يجب عدم الوقوف فوق الجهاز أو وضع أشياء فوقه (مثل ملابس الغسيل أو الشمعدان المضاء أو السجائر المشتعلة أو الأطباق أو المواد الكيماوية أو الأشياء المعدنية وما إلى ذلك).
- قد ينتج عن هذا الأمر الإصابة بصدمة كهربية أو حدوث حريق أو مشاكل بالمنتج أو وقوع إصابات.
- يجب عدم رش مواد متطايرة، مثل المبيدات الحشرية، فوق سطح الجهاز.
- بالإضافة إلى أن هذا الأمر يضر بالإنسان، فقد ينتج عنه أيضًا الإصابة بصدمة كهربية أو نشوب حريق أو حدوث مشاكل بالمنتج.
- لا تضع شيئًا ينتج عنه وجود مجال كهرومغناطيسي بالقرب من الغسالة.
- قد ينتج عن هذا الأمر حدوث إصابات بسبب تعطل الجهاز.
- يجب عدم لمس الماء حيث يكون الماء الذي يتم تصريفه أثناء الغسيل في درجات حرارة عالية أو أثناء دورة التنشيف ساخناً.
- قد ينتج عن هذا الأمر حدوث حروق أو إصابات.
- يجب عدم غسل مفروشات المقاعد أو السجاد أو القماش (*) المضادة للماء أو تنشيفها أو جفيفها ما لم يكن جهازك يتضمن برنامجًا خاصًا لغسل هذه العناصر.
- يجب عدم غسل السجاد السميك أو الثقيل حتى في حالة وجود علامة الغسالة على بطاقة العناية بالمنتج.
 - قد يؤدي هذا الأمر إلى حدوث إصابة أو تلف بالغسالة أو بالحوائط أو بالأرضية أو بالملابس نتيجة للاهتزازات غير الطبيعية.
 - * المفروشات الصوفية أو الأغشية المقاومة للأمطار أو سترات الصيد أو بنطلونات التزلج أو حقائب النوم أو أغطية الحفاضات أو الملابس الرياضية أو أغطية الدراجات والدراجات البخارية والسيارات، وما إلى ذلك.
- يجب عدم تشغيل الغسالة في حالة عدم وجود درج المسحوق.
- قد ينتج عن هذا الأمر وجود صدمة كهربية أو إصابة نتيجة لتسرب الماء.
- يجب عدم لمس الحوض من الداخل أثناء عملية التنشيف أو بعدها مباشرة نظرًا لأنه يكون ساخنًا.
- قد ينتج عن هذا الأمر الإصابة بحروق.
- يجب عدم وضع اليدين في درج المسحوق بعد فتحه.
- قد ينتج عن هذا حدوث إصابات لأنه قد يعلق جهاز إدخال المسحوق بيدك. تجنب وضع أي أشياء (مثل الأحذية وبقايا الطعام والحيوانات) غير الملابس بداخل الغسالة.
 - قد يؤدي هذا الأمر إلى تلف الغسالة أو حدوث إصابة ووفاء في حالة وجود حيوانات أليفة نتيجة للاهتزازات غير الطبيعية.
- يجب عدم الضغط على الأزرار باستخدام أدوات حادة مثل المسامير أو السكاكين أو الأظافر، وما إلى ذلك.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حدوث إصابة.
- يحظر غسل الملابس التي تحتوي على زيوت أو كرمات أو غسولات، والتي تكون في الغالب موجودة في متاجر المستحضرات الجلدية أو عيادات التدليك.
- قد ينتج عن هذا الأمر تشوه الحاجز المطاطي وتسرب الماء.
- يجب عدم ترك أي أشياء معدنية، مثل الدبابيس أو بنس الشعر أو مواد التبييض، في الحوض لفترات طويلة من الوقت.
- قد يؤدي هذا الأمر إلى صدأ الحوض.
 - وفي حالة بدء ظهور الصدأ على سطح الحوض، قم بتنظيف سطحه باستخدام سائل تنظيف (متعادل) وإسفنجة في تنظيفه. يجب عدم استخدام فرشاة معدنية نهائيًا.
- يجب عدم استخدام سائل التنظيف بشكل مباشر. كما يجب عدم غسل ملابس الغسيل أو شطفها أو تنشيفها في حالة تعلق مسحوق جاف للتنظيف بها.
- قد يؤدي هذا الأمر إلى حدوث اشتعال فوري نتيجة للحرارة الناتجة عن تأكسد الزيت.
- يجب عدم استخدام الماء القادم من أجهزة تبريد/تسخين الماء.
- قد ينتج عن هذا الأمر حدوث مشاكل في الغسالة.

- يجب عدم استخدام صابون غسل اليدين المتعادل مع الغسالة.
- ففي حالة التراكم والتصلب داخل الغسالة، قد تحدث مشاكل تتعلق بالمنتج مثل تغيير اللون أو الصدأ أو وجود رائحة سيئة.
- يجب عدم غسل أنواع الغسيل كبيرة الحجم مثل المفروشات في شبكة الغسيل.
- يمكنك وضع الجوارب وحملات الصدر في شبكة الغسيل وغسلها مع بقية ملابس الغسيل.
- يؤدي التقصير في الالتزام بهذا الأمر إلى حدوث إصابة نتيجة للاهتزازات غير الطبيعية.
- لا تستخدم مسحوق غسيل متبيس.
- فقد يحدث تسرب للماء في حالة تراكم هذا المسحوق المتبيس داخل الغسالة.
- بالنسبة للغسالات التي تحتوي على فتحات تهوية بقاعدتها، تأكد من عدم سد السجاد أو أية عوائق أخرى لهذه الفتحات.
- تأكد من إفراغ كافة جيوب الملابس التي سيتم غسلها.
- قد تتسبب الأشياء الصلبة والحادة مثل العملات المعدنية أو الدبابيس أو المسامير أو المسامير القلاووظ أو الأحجار في إحداث أضرار بالغة بالجهاز.
- يجب عدم غسل الملابس المزودة بإبريمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

علامات التحذير الصارمة الخاصة بالتنظيف



تحذير

- يجب عدم تنظيف الجهاز عن طريق رش الماء فوقه مباشرةً.
- يجب عدم استخدام البنزين أو مرقق الطلاء أو الكحول لتنظيف الجهاز.
- قد ينتج عن هذا الأمر تغيير في اللون أو تشويه أو تلف أو حدوث صدمة كهربية أو نشوب حريق.
- افصل قابس الجهاز من مقبس الحائط قبل تنظيفه أو صيانته.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.



المحتويات



إعداد الغسالة	١٣	١٣
فحص الأجزاء	١٣	
استيفاء متطلبات التركيب	١٤	
مصدر الطاقة الكهربائية والتوصيل الأرضي	١٤	
توريد الماء	١٤	
التصريف	١٥	
التثبيت الأرضي	١٥	
درجة الحرارة المحيطة	١٥	
تركيب القنطرة أو الخزانة	١٥	
تركيب الغسالة	١٥	
غسل الملابس	٢١	٢١
الغسل للمرة الأولى	٢١	
إرشادات أساسية	٢١	
استخدام لوحة التحكم	٢٢	
Child Lock (التأمين ضد عبث الأطفال)	٢٥	
Sound off (إيقاف تشغيل الصوت)	٢٥	
Delay End (تأجيل التوقف)	٢٦	
My cycle (الدورة المفضلة)	٢٦	
Eco Bubble (الفقايع صديقة البيئة)	٢٧	
غسل الملابس باستخدام قرص تحديد الدورة	٢٨	
غسل الملابس يدويًا	٢٩	
إرشادات حول الغسيل	٢٩	
معلومات حول مسحوق الغسيل والمواد الإضافية	٣٠	
مسحوق الغسيل الذي يمكن استخدامه	٣٠	
درج مسحوق الغسيل	٣١	
المنظف السائل (متوفر بطرازات محددة)	٣١	
تنظيف الغسالة وصيانتها	٣٢	٣٢
Hygiene Drum Clean (تنظيف الحاوية بطريقة صحية)	٣٢	
تصريف الماء من الغسالة عند الطوارئ	٣٣	
تنظيف مصفاة الخلفات	٣٤	
تنظيف الأسطح الخارجية	٣٤	
تنظيف درج مسحوق الغسيل والجزء الداخلي منه	٣٥	
تنظيف المصفاة الشبكية المتصلة بخراطوم الماء	٣٥	
إصلاح غسالة متجمدة	٣٦	
تخزين الغسالة	٣٦	
استكشاف المشاكل وحلها ورموز المعلومات	٣٧	٣٧
تحقق مما يلي إذا كانت الغسالة...	٣٧	
رموز المعلومات	٣٨	
جدول الدورات	٣٩	٣٩
جدول الدورات	٣٩	
جدول العناية بالأقمشة	٤٠	
حماية البيئة	٤٠	
بيان التوافق	٤٠	
المواصفات	٤١	٤٠

إعداد الغسالة

تأكد من اتباع القوائم بالتركيب لهذه الإرشادات بدقة حتى تعمل غسالتك الجديدة بشكل صحيح ولتجنب حدوث مخاطر الإصابة عند القيام بالغسل.

فحص الأجزاء

أخرج الغسالة بحرص من صندوقها وتأكد من وجود كافة الأجزاء الموضحة أدناه. في حالة تلف الغسالة أثناء عملية الشحن أو عدم استلامك لكافة الأجزاء، اتصل بخدمة عملاء Samsung أو الموزع المعتمد لدى Samsung.

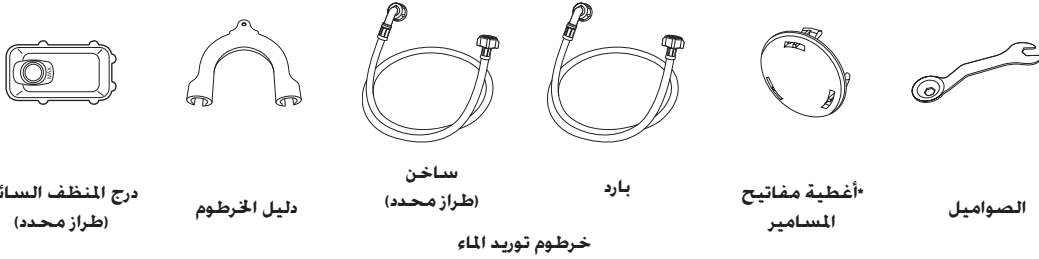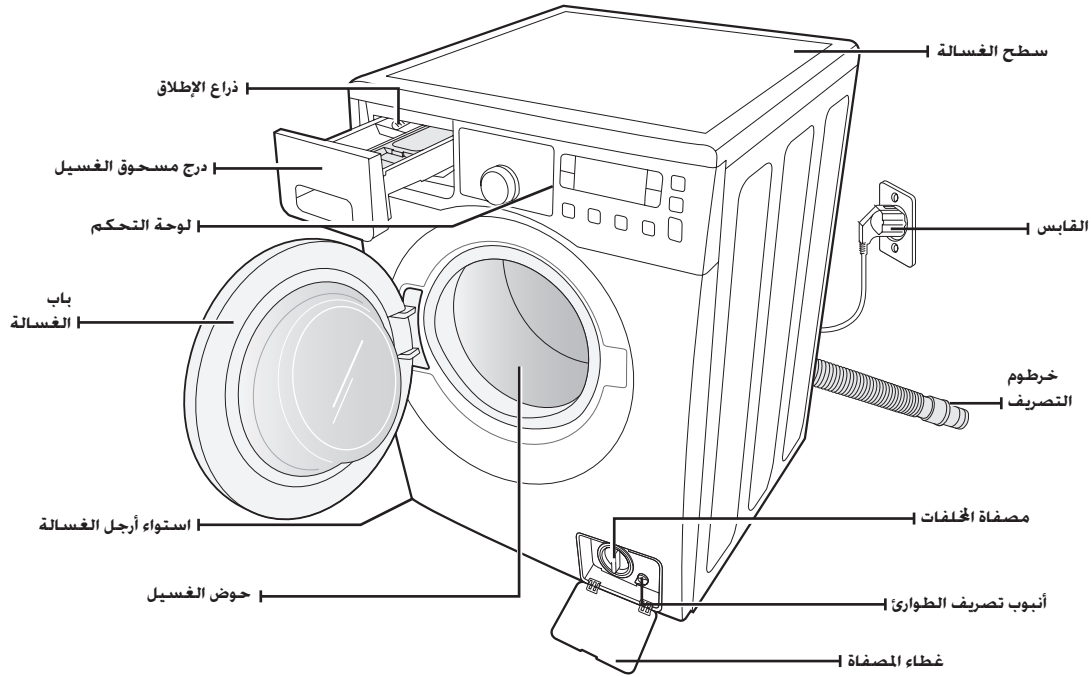

* أغطية مفاتيح المسامير : يختلف عدد أغطية فتحات المسامير باختلاف الطراز (من ٣ إلى ٥ أغطية).

إعدادات الغسالة

استيفاء متطلبات التركيب

مصدر الطاقة الكهربائية والتوصيل الأرضي



منوع استخدام كبلات إضافية.

تحذير استخدم سلك التيار الكهربائي المرفق مع الغسالة فقط.

عند الإعداد لعملية التركيب، تأكد أن سلك التيار الكهربائي يوفر:

- قاطع دائرة كهربية أو منصهر بجهد ٢٢٠ إلى ٢٤٠ فولت تيار متردد / ٦٠ هرتز
- دائرة كهربية فرعية منفصلة لتشغيل الغسالة فقط

يجب توصيل الغسالة بمأخذ أرضي. وفي حالة حدوث خلل أو تعطل في الأداء، يعمل التوصيل الأرضي على تقليل خطورة التعرض لصدمة كهربية، وذلك بتوفير مسار أقل مقاومة للتيار الكهربائي.

يتم تزويد الغسالة بقابس تيار كهربائي أرضي بثلاثة سنون لاستخدامه بشكل صحيح في المأخذ الأرضي المركب بشكل صحيح.



لا تقم مطلقاً بتوصيل السلك الأرضي بخطوط مواسير السباكة البلاستيكية أو خطوط الغاز أو مواسير الماء الساخن.

فقد يؤدي التوصيل غير الصحيح للموصل الأرضي الخاص بالغسالة إلى حدوث صدمة كهربائية.

استشر فني كهرباء مؤهلاً أو فني صيانة إذا لم تكن متأكدًا من صحة التوصيل الأرضي للغسالة. يُحظر تعديل القابس المرفق مع الغسالة. وفي حالة عدم توافقه مع مخرج التيار، استعن بفني كهرباء مؤهل لتركيب مخرج مناسب.

توريد الماء

يتم ملء الغسالة بشكل سليم عندما يكون ضغط الماء من ٥٠ إلى ٨٠٠ كيلوباسكال. قد يتسبب ضغط الماء الأقل من ٥٠ كيلوباسكال في تلف صمام الماء ما لا يسمح بإغلاقه كليةً، أو قد تستغرق الغسالة وقتًا أطول مما تسمح به عناصر التحكم للملئها بالماء، مما ينتج عنه إيقاف تشغيل الغسالة. (يتم تضمين نظام خديد وقت ملء الغسالة في عناصر التحكم والذي تم تصميمه للحد من عمليات تدفق/فيضان الماء في حالة ارتخاء الخرطوم الداخلي).

يجب أن تكون صنابير الماء على بُعد ١٢٠ سم من الجانب الخلفي للغسالة لتسهيل وصول خرطوم توصيل الماء المرفقة إلى الغسالة.



تقوم معظم متاجر توريد المواسير ببيع خرطوم توصيل الماء على مختلف أطوالها التي تصل حتى ٣٠٥ سم.

يمكنك تقليل مخاطر تسرب الماء أو تلوثه عن طريق:

- تيسير وصول الخرطوم إلى صنابير الماء.
- إغلاق الصنابير في حالة عدم تشغيل الغسالة.
- الفحص الدوري للتأكد من عدم تسرب الماء من تجهيزات خرطوم توصيل الماء.

قم بفحص كافة التوصيلات الموجودة في صمام وصنابير الماء للتحقق مما إذا كان هناك أي تسريب قبل استخدام الغسالة أول مرة.



التصريف

توصي Samsung باستخدام ماسورة رأسية يصل ارتفاعها إلى ٦٥ سم. يجب توجيه خرطوم التصريف باستخدام مشبك خرطوم التصريف إلى اتجاه الماسورة الرأسية. ويجب أن تكون الماسورة الرأسية كبيرة بدرجة كافية تسمح بإدخال القطر الخارجي لخرطوم التصريف. الذي يقوم المصنّع بإرفاقه.

التثبيت الأرضي

يجب تثبيت الغسالة على سطح ثابت وصلب للحصول على أفضل أداء. قد تحتاج الأسطح الخشبية إلى تقويتها لتقليل الاهتزاز و/أو الأحمال غير المتوازنة. تكون طريقة بسط السجاد على الأرضيات بالإضافة إلى أسطح البلاط الناعمة بمثابة عوامل مساهمة في عمليات الاهتزاز واحتمالية حرك الغسالة بشكل طفيف أثناء دورة التنشيف.

لا تقم مطلقًا بتركيب الغسالة على أرضية أو بنية ضعيفة.

درجة الحرارة المحيطة

لا تقم بتركيب الغسالة في مناطق قد يتجمد فيها الماء. حيث إن الغسالة تحتفظ دومًا ببعض الماء في صمام الماء والمضخة وأجزاء من الخرطوم. ويمكن أن يتسبب الماء المتجمد الموجود في المواسير في إلحاق ضرر بالسيور والمضخة والمكونات الأخرى.

تركيب القنطرة أو الخزانة

لتشغيل الغسالة بشكل آمن وسليم، يجب توفير الحد الأدنى من الفراغات حولها كما يلي:

الخلفية — ٥٠ سم

الجوانب — ٢٥ سم

الواجهة — ٤٦٥ سم

الجزء العلوي — ٢٥ سم

في حالة تركيب الغسالة والجفف معًا، يجب أن يكون بالجانب العلوي للقنطرة أو الخزانة فتحة هواء غير مسدودة ٤٦٥ سم على الأقل. لا تتطلب الغسالة وحدها فتحة هواء معينة.

تركيب الغسالة

الخطوة رقم ١

اختيار مكان الغسالة

- قبل تركيب الغسالة، تأكد من توفر ما يلي في المكان الذي قمت باختياره:
- سطح صلب ومستو دون وجود سجاد أو أرضية قد تعوق عملية التهوية
- مكان بعيد عن أشعة الشمس المباشرة
- تهوية كافية
- لا يصل إلى مرحلة التجمد (أقل من ٠ درجة مئوية)
- يكون بعيدًا عن مصادر الحرارة مثل البترول أو الغاز
- تتوفر به مساحة كافية حتى لا يتم وضع الغسالة على سلك الطاقة


إعداد الغسالة

الخطوة رقم ٢


فك مسامير الشحن

قبل تركيب الغسالة، يجب إزالة كافة مسامير الشحن من اللوحة الخلفية للجهاز.


١. قم بفك جميع المسامير بواسطة مفتاح الربط المرفق مع الجهاز.

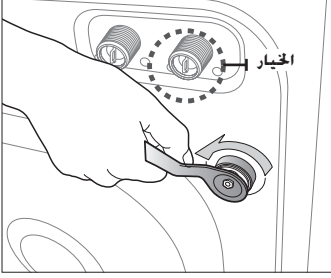

٢. امسك الصواميل بواسطة مفتاح الربط واسحبها من خلال الجزء العريض للفتحة. كرر ذلك لفك كل مسمار.

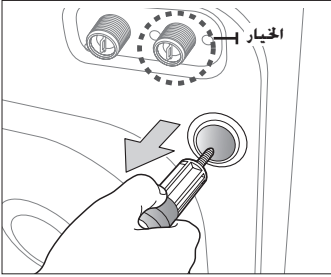

٣. قم بتغطية جميع الفتحات باستخدام الأغشية البلاستيكية المرفقة مع الجهاز.

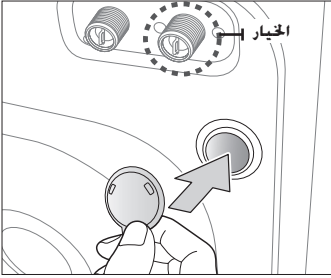

٤. قم بحفظ مسامير الشحن في مكان بعيد آمن فقد تحتاج إلى نقل الغسالة إلى مكان آخر في المستقبل.

⚠ قد تشكل مواد التعبئة خطورة على الأطفال: احتفظ بكافة مواد التعبئة (الأكياس البلاستيكية والمواد المصنوعة من مادة البوليستيرين. وما إلى ذلك)، بعيداً عن متناول الأطفال.

الخطوة رقم ٣


ضبط استواء أرجل الغسالة

عند تركيب الغسالة، تأكد من توصيل قابس التيار الكهربائي وخرطوم توريد الماء وخرطوم التصريف بسهولة.




١. ضع الغسالة في المكان المناسب.

٢. اجعل الغسالة مستوية عن طريق لف الأقدام المساوية إلى الداخل والخارج يدويًا كما هو مطلوب.

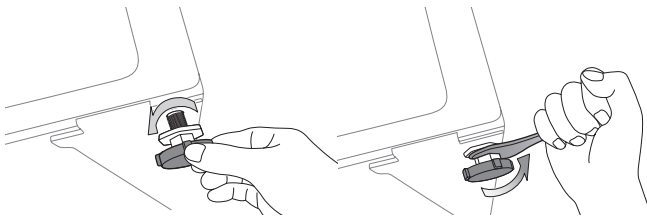

٣. عند استواء الغسالة، أحكم ربط الصواميل باستخدام مفتاح الربط المرفق مع الغسالة.

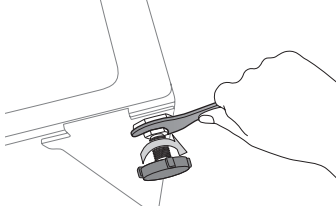

الخطوة رقم ٤

توصيل الماء والتصريف


توصيل خرطوم توريد الماء

١. استخدم مثبت الذراع على شكل حرف L الخاص بخرطوم توريد الماء البارد وقم بتوصله إلى مدخل توريد الماء البارد الموجود في الجانب الخلفي من الغسالة، وأحكم ربطه يدويًا.



يجب توصيل أحد طرفي خرطوم توريد الماء بالغسالة والطرف الآخر للخرطوم بصنبور الماء. لا تجذب خرطوم توريد الماء. إذا كان الخرطوم قصيرًا جدًا، استبدله بخرطوم أطول يتحمل الضغط العالي.

٢. قم بتوصيل الطرف الآخر لخرطوم توريد الماء البارد بصنبور الماء البارد وأحكم تثبيته يدويًا. يمكنك، إذا لزم الأمر، إعادة توصيل خرطوم الماء بالغسالة من خلال إرخاء مثبت الخرطوم ولفه وإعادة ربطه بإحكام.

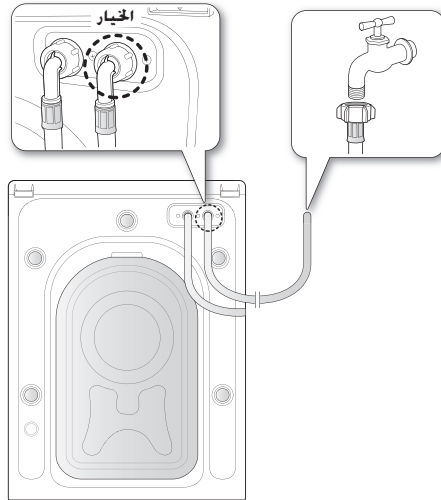

بالنسبة للطرازات المحددة المزودة بمدخل إضافي لتوريد الماء الساخن:

١. استخدم مثبت الذراع على شكل L الأحمر الخاص بخرطوم توريد الماء الساخن وقم بتوصيله بمدخل توريد الماء الساخن الموجود في الجانب الخلفي من الغسالة، وأحكم ربطه يدويًا.


٢. قم بتوصيل الطرف الآخر لخرطوم توريد الماء الساخن بصنبور الماء الساخن وأحكم تثبيته يدويًا.

٣. استخدم خرطوم على شكل Y إذا أردت استخدام الماء البارد فقط.


إعدادات الغسالة

توصيل خرطوم توريد الماء


١. قم بفك الحوّل من خرطوم توريد الماء.

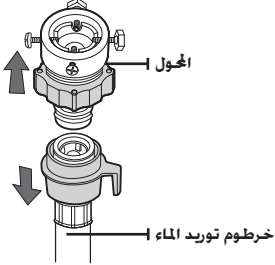

٢. أولاً، باستخدام مفك براغي من نوع "٥"، وقم بخلخلة المسامير الأربعة الموجودة بالحوّل. ثم أخرج الحوّل واجعل الجزء (٢) باتجاه السهم حتى تكون هناك مسافة مقدارها ٥ سم بينهما.

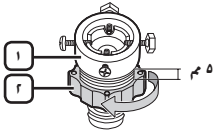


٣. قم بتوصيل الحوّل بصنبور الماء عن طريق ربط المسامير بإحكام أثناء رفع الحوّل لأعلى. اجعل الجزء (٢) باتجاه السهم وقم بوصل الجزء (١) و(٢).

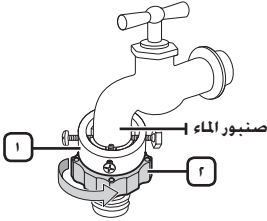



٤. قم بتوصيل خرطوم توريد الماء بالحوّل. عند إرخاء الجزء (٣)، يتصل الخرطوم بالحوّل تلقائياً مع حدوث صوت "نقرة".

بعد توصيل خرطوم توريد الماء بالحوّل، تأكد من توصيله بشكل صحيح عن طريق سحب خرطوم توريد الماء لأسفل.

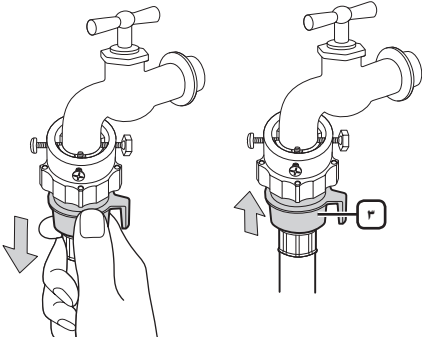


٥. قم بتوصيل الطرف الآخر من خرطوم توريد الماء بصمام دخول الماء الموجود بالجانب الخلفي من الغسالة. لف خرطوم توريد الماء في اتجاه عقارب الساعة.

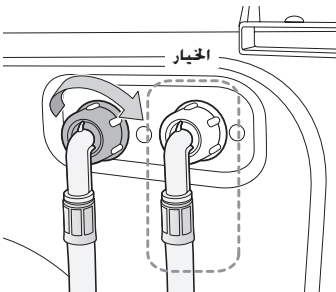

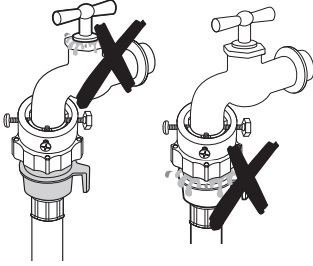

٦. قم بتشغيل مصدر توريد الماء وتأكد من عدم وجود تسريبات من صمام الماء أو الصنبور أو الحوّل. قم بتكرار الخطوات السابقة. في حالة تسريب الماء. لا تستخدم الغسالة في حالة تسريب الماء. فقد يتسبب ذلك في حدوث صدمة كهربية أو إصابة. 

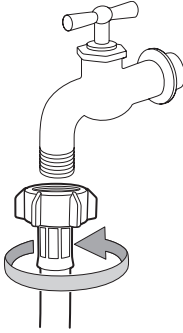


- إذا كان صنبور الماء من النوع القلاووظ. قم بتوصيل خرطوم توريد الماء إلى الصنبور كما هو موضح.

استخدم صنبور من النوع العادي لتوريد الماء. إذا كان الصنبور مربعاً أو كبيراً جداً. أزل الحلقة الفاصلة قبل إدخال الصنبور في الحوّل. 

توصيل خرطوم المياه (طرازات محددة)

- تم تصميم خرطوم المياه للحماية المتكاملة من التسرب. ويتم توصيله بخرطوم توريد المياه وسيعمل على إيقاف تدفق المياه تلقائياً في حالة تلف الخرطوم. كما يتم عرض مؤشر التحذير.
- قم بتوصيل خرطوم تزويد الماء بصنبور الماء كما هو موضح.

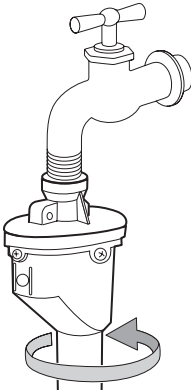


إعدادات الغسالة

توصيل خرطوم التصريف


يمكنك وضع نهاية خرطوم التصريف بثلاث طرق:

١. فوق حافة حوض الغسيل: يجب وضع خرطوم التصريف على ارتفاع يتراوح بين ٦٠ و ٩٠ سم. وللإبقاء على انثناء خرطوم التصريف. استخدم حامل الخرطوم البلاستيكي المرفق. ثبت الحامل على الجدار بواسطة خطاف أو في الصنبور بواسطة سلك أو حبل لمنع سقوط خرطوم التصريف على الأرض.

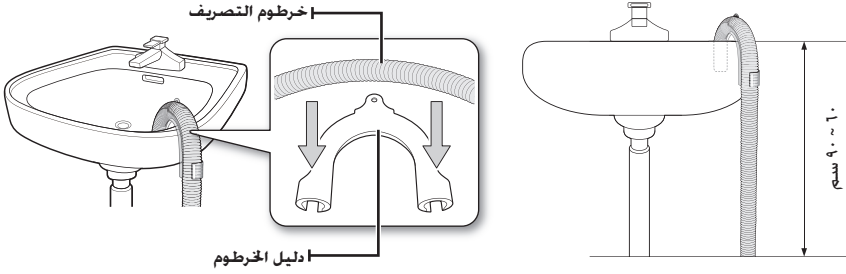

٢. في فرع أنبوب تصريف الحوض: يجب أن يكون فرع أنبوب التصريف فوق سبابة الحوض بحيث يكون طرف الخرطوم على ارتفاع ٦٠ سم على الأقل عن الأرض.
٣. في أنبوب التصريف: نوصي باستخدام أنبوب عمودي بارتفاع ٦٥ سم؛ على ألا يقل طوله عن ٦٠ سم ولا يزيد عن ٩٠ سم.

- يتطلب خرطوم تصريف الماسورة الرأسية ما يلي:
- قطر يبلغ ٥ سم بحد أدنى.
- سعة جرف تبلغ ٦٠ لتراً في الدقيقة بحد أدنى.

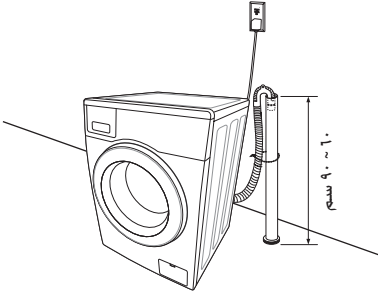

الخطوة رقم ٥

تشغيل الغسالة


- قم بتوصيل سلك التيار الكهربائي بمقبس حائط يكون مخرّج تيار كهربائي متردداً معتمداً وبقدرة من ٢٢٠ إلى ٢٤٠ فولت / ٦٠ هرتز ومحمي بصمام كهربائي أو قاطع دائرة كهربائية.
- (للمزيد من المعلومات حول متطلبات التوصيل الكهربائي والأرضي، راجع صفحة رقم ١٤).

غسل الملابس

مع الغسالة الجديدة من Samsung، يكون الأمر الأكثر صعوبة هو تحديد الكمية التي يجب غسلها أولاً.

الغسل للمرة الأولى

قبل غسل الملابس للمرة الأولى، يجب تشغيل الجهاز دورة كاملة (أي بدون ملابس).

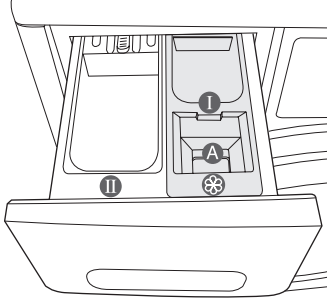

١. اضغط على الزر **Power** (تشغيل).
 ٢. أضف كمية قليلة من مسحوق الغسيل في الجزء المخصص له (II) في درج المسحوق.
 ٣. قم بتشغيل مؤد الماء المتصل بالغسالة.
 ٤. اضغط على الزر **Start/Pause** (تشغيل/إيقاف مؤقت).
- يؤدي ذلك إلى التخلص من الماء المتبقي في الغسالة نتيجة التشغيل الاختباري الذي قامت به الشركة المصنعة للجهاز.


- الدرج ①:** مسحوق للغسل الأولي أو نشا.
- الدرج ②:** مسحوق الغسيل لدورة الغسل الرئيسية ومواد تنقية الماء ومواد ما قبل النقع ومادة التبييض ومواد إزالة البقع.
- لوضع المنظف السائل، قم باستخدام درج المنظف السائل (راجع الصفحة ٣١ بدليل الطراز المائل). لا تقم بإضافة مسحوق التنظيف بداخل درج المنظف السائل.
- الدرج ③:** المواد الإضافية، مثل مكون أو منعقم الأقمشة (املاً الدرج بحيث لا تتجاوز الحافة السفلية (الحد الأقصى) العلامة "A")

إرشادات أساسية

١. قم بوضع الملابس في الغسالة.
- ⚠️ لا تتجاوز الوزن المحدد للغسالة. لتحديد سعة الوزن لنوع الملابس التي ترغب في غسلها، راجع الجدول الموجود في صفحة رقم ٣٠.
- تأكد من أن الملابس غير عالقة بالباب، حيث قد يؤدي ذلك إلى تسرب الماء.
- قد يتبقي مسحوق الغسيل في الجزء المطاطي الأمامي للغسالة بعد دورة الغسيل، قم بإزالة أي مسحوق متبقي، لأن ذلك قد يتسبب في تسرب الماء.
- احذر لمس الباب الزجاجي عندما تكون الغسالة قيد التشغيل أو لأنها قد تكون ساخنة.
- احذر فتح درج مسحوق الغسيل أو مصفاة الخلفات عندما تكون الغسالة قيد التشغيل لأن قد تتعرض للماء أو البخار الساخن.
- احذر غسل العناصر المقاومة للماء بالدورة العادية فيما عدا برنامج العناية بملابس الخروج.
٢. أغلق الباب حتى يثبت.
٣. قم بتشغيل الغسالة.
٤. قم بإضافة المسحوق والمواد الإضافية إلى درج التوزيع.
٥. حدد الدورة والخيارات المناسبة لكمية الملابس التي تمت إضافتها.
٦. سيضيء مؤشر الغسل وسيظهر وقت الدورة المحدد على لوحة العرض.
٦. اضغط على الزر **Start/Pause** (تشغيل/إيقاف مؤقت).

غسل الملابس

استخدام لوحة التحكم

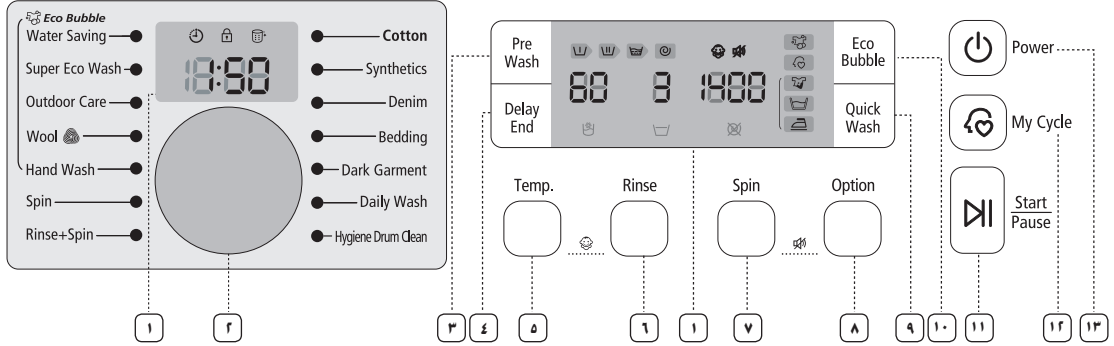

تعرض الوقت المتبقي لدورة الغسل وكافة المعلومات الخاصة بالدورة ورسائل الخطأ.

لوحة العرض الرسومية الرقمية

اختيار نوع التدوير وسرعة التنشيف للدورة.

لمزيد من المعلومات، راجع "غسل الملابس باستخدام قرص خديد الدورة". (راجع صفحة ٢٨)

Cotton (قطن) - للملابس القطنية خفيفة أو متوسطة الاتساخ وأغطية السرير ومفارش المائدة والملابس الداخلية والمناشف والقمصان، وما إلى ذلك.

Synthetics (الألياف الصناعية) - لغسل البلوزات والقمصان متوسطة أو خفيفة الاتساخ وغيرها من الملابس المصنوعة من البوليستر (الديولين والتريفيرا) ومادة البوليأمايد (البيرلون والنيلون) أو الأنسجة الصناعية الأخرى.

Denim (الجيّنز) - يضمن وجود مستوى ماء أعلى في دورة الغسيل الأساسية والشطف الإضافي وعدم وجود أي بقايا من مسحوق الغسيل في الملابس.

Bedding (مفروشات) - لغطاء السرير وملاءات السرير وأغطية اللحاف، وما إلى ذلك.

غسل ما يقل عن ٢ كجم ونوع واحد فقط من المفروشات لتحقيق أفضل النتائج.

Dark Garment (ملابس داكنة) - تضمن دورات الشطف الإضافية والتنشيف منخفض السرعة غسل ملابس الداكنة المفضلة بلطف وشطفها جيدًا.

Daily Wash (غسيل يومي) - للملابس التي تستخدم يوميًا مثل الملابس الداخلية والقمصان.

Hygiene Drum Clean (تنظيف الحاوية بطريقة صحية) - لتنظيف الحاوية. لتنظيف الحاوية من الأتربة والبكتيريا، يُوصى تشغيله بانتظام (بعد كل ٤٠ دورة غسيل). بدون منظف أو مبيض.

Water Saving (توفير الماء) - تم تصميم هذه الدورة خصيصًا لتتمكن من غسل الملابس بفاعلية بأقل كمية من الماء.

Super Eco Wash (غسل متميز صديق البيئة) - تقوم **Eco Bubble** (الفقاعات صديقة البيئة) ذات درجة الحرارة المنخفضة بضمن تحقيق أفضل نتائج للغسيل بينما تقوم بتوفير الطاقة بشكل فعال.

Outdoor Care (العناية بملابس الخروج) - للغسيل الخارجي مثل الملابس التسلق وملابس التزلج والملابس الرياضية. إلى جانب توفر لمسات المعالجة الفعالة للمنسوجات والألياف مثل الألياف اللدنة والقماش القابل للتمدد والألياف الدقيقة.

CYCLE SELECTOR
(قرص تحديد الدورة)

غسل الملابس


لغسل الملابس خفيفة الاتساخ والغسيل الأقل من ٢ كجم التي تحتاجها بسرعة. يستغرق هذا البرنامج حوالي ١٥ دقيقة كحد أدنى. ولكن قد يختلف من القيم الموضحة حسب ضغط المياه وعسر المياه ودرجة حرارة التزويد بالمياه ودرجة حرارة الغرفة ونوع الغسيل وكميته ودرجة الاتساخ والمسحوق المستخدم للملابس الغير متزينة وحدوث انقطاع التيار الكهربائي والخيارات الإضافية المحددة. • اضغط على هذا الزر بشكل متكرر لاختيار وقت الدورة: ١٥ دقيقة ← ٢٠ دقيقة ← ٣٠ دقيقة ← ٤٠ دقيقة ← ٥٠ دقيقة ← ٦٠ دقيقة ← إيقاف تشغيل ⚠ تحذير يجب أن يكون المنظف سواء كان مسحوقاً أو سائلاً أقل من ٢٠ جراماً للملابس التي وزن ٢ كجم) أو قد يتبقى المنظف بالملابس.	٩ زر التحديد QUICK WASH (غسل سريع)
يتم افتراضياً تشغيل تحديد Eco Bubble (الفقااعات صديقة البيئة). اضغط على زر الخيار Eco Bubble (الفقااعات صديقة البيئة) مرة واحدة لإلغاء التحديد و Bubble Generator OFF (إيقاف تشغيل مولّد الفقااعات) (الموضح باللوحة). ثم اضغط عليه مرة أخرى لتعيين الوظيفة إلى ON (تشغيل). • بعض دورات الغسيل يكون بها الخيار Eco Bubble (الفقااعات صديقة البيئة) معيناً إلى ON (تشغيل) (سيتم توضيح ذلك باللوحة. ويتم تشغيل "المولّد" تلقائياً). • لا تحتاج دورات الغسل الأخرى لهذا الخيار وتقوم "بإيقاف تشغيل المولّد" تلقائياً. • يمكنك ضبط هذا الخيار يدوياً مع العديد من الدورات. مما يؤثر على وقت الغسل بشكل واضح على اللوحة لتحقيق النتائج المطلوبة (المزيد من المعلومات الرجاء مراجعة صفحة ٢٧).	١٠ زر التحديد ECO BUBBLE (الفقااعات صديقة البيئة)
اضغط لإيقاف الدورة مؤقتاً وإعادة تشغيلها.	١١ زر التحديد START/PAUSE (تشغيل/إيقاف مؤقت)
اختر الدورة المفضلة لديك بما في ذلك درجة الحرارة والتنشيف ومستوى الاتساخ والخيار. وما إلى ذلك.	١٢ زر التحديد MY CYCLE (الدورة المفضلة)
اضغط على هذا الزر مرة لتشغيل الغسالة. واضغط عليه مرة أخرى لإيقاف تشغيلها. في حالة عدم الضغط على أي من أزرار الغسالة لمدة تزيد عن ١٠ دقائق أثناء تشغيلها. يتم إيقاف تشغيلها تلقائياً.	١٣ الزر POWER (تشغيل)

Child Lock (التأمين ضد عبث الأطفال)

تتيح لك وظيفة Child Lock (التأمين ضد عبث الأطفال) قفل الأزرار حتى لا يمكن تغيير دورة الغسيل التي قمت باختيارها.

Activating/Deactivating (التنشيط /إلغاء التنشيط)

إذا كنت ترغب في تشغيل وظيفة Child Lock (التأمين ضد عبث الأطفال) أو عدم تشغيلها، اضغط على الزرين Temp (درجة الحرارة) و Rinse (شطف) في وقت واحد لمدة ٣ ثوان. "بضيء مؤشر Child Lock (التأمين ضد عبث الأطفال)" عند تشغيل هذه الميزة.

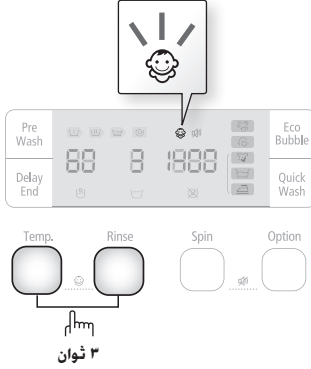


يمكن استخدام الزر Power (تشغيل) فقط عند تنشيط وظيفة Child Lock (التأمين ضد عبث الأطفال). يستمر تشغيل وظيفة Child Lock (التأمين ضد عبث الأطفال) حتى بعد تشغيل الغسالة وإيقاف تشغيلها أو بعد فصل توصيل سلك التيار الكهربائي وإعادة توصيله.

Sound off (إيقاف تشغيل الصوت)

يمكن تحديد وظيفة Sound Off (إيقاف تشغيل الصوت) مع كافة الدورات. عند تحديد هذه الوظيفة، يتم إيقاف تشغيل الصوت لكافة الدورات. حتى في حالة تشغيل الطاقة أو إيقاف تشغيلها بشكل متكرر. لا يتغير الإعداد الذي تم اختياره.

Activating/Deactivating (التنشيط /إلغاء التنشيط)

إذا كنت تريد تشغيل وظيفة Sound Off (إيقاف تشغيل الصوت)، اضغط على الزرين Spin (تنشيط) و Option (الخيار) في نفس الوقت لمدة ٣ ثوان. ستضيء علامة "Sound Off (إيقاف تشغيل الصوت)" عند تشغيل هذه الخاصية.

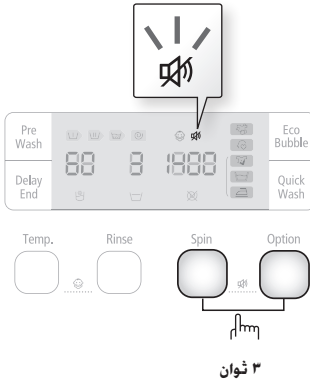

غسل الملابس

Delay End (تأجيل التوقف)

- يمكنك ضبط الغسالة لإجراء عملية الغسل تلقائيًا في وقت لاحق. قم باختيار تأجيل الوقت من ٣ ساعات حتى ١٩ ساعة (بزيادة ساعة واحدة). تشير الساعة المعروضة إلى الوقت الذي يتم الانتهاء فيه من عملية الغسل.
١. يمكنك ضبط الغسالة تلقائيًا أو يدويًا حسب نوع الملابس التي تريد غسلها.
 ٢. اضغط على الزر Delay End (تأجيل التوقف) بشكل متكرر حتى يتم تعيين وقت التأجيل المطلوب.
 ٣. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت). يضيء مؤشر "Delay End (تأجيل التوقف)"، وتبدأ الساعة بالعد التنازلي حتى ينتهي الوقت المحدد.
 ٤. لإلغاء وظيفة Delay End (تأجيل التوقف)، اضغط على الزر Power (تشغيل) ثم قم بتشغيل الغسالة من جديد.

My cycle (الدورة المفضلة)

- يتيح لك إمكانية تنشيط الغسل الاعتيادي (درجة الحرارة والتنشيف ومستوى الاتساخ وغيرها) بالضغط على زر مناسب واحد. عند الضغط على الزر My Cycle (الدورة المفضلة)، يتم استخدام زر My Cycle (الدورة المفضلة) لتحميل خيارات My Cycle (الدورة المفضلة) التي تم حفظها واستخدامها. ستشير إضاءة "My Cycle (الدورة المفضلة)" إلى أن الدورة قيد التشغيل. كما ستومض الإضاءة الخاصة بالخيارات والدورة المختارة.
- يمكنك تعيين كافة الخيارات كما يلي بالوضع My Cycle (الدورة المفضلة).
١. قم بتشغيل مصدر توريد الماء.
 ٢. اضغط على الزر Power (تشغيل).
 ٣. حدد الدورة باستخدام Cycle Selector (قرص تحديد الدورة).
 ٤. بعد الانتهاء من تحديد الدورة، قم بتعيين كل خيار تريده.

راجع "جدول الدورة" الموجود بالصفحة ٣٩ لمزيد من المعلومات حول إعدادات الخيارات المتوفرة بكل دورة.

٥. ثم يمكنك تخزين الدورة والخيارات المحددة بواسطة الضغط باستمرار على الزر My Cycle (الدورة المفضلة) لمدة أكثر من ٣ ثوانٍ بالوضع My Cycle (الدورة المفضلة). يتم عرض الدورة والخيارات التي قمت بتحديدتها في المرة القادمة التي تختار فيها وظيفة My Cycle (الدورة المفضلة).

يمكنك تغيير إعدادات My Cycle (الدورة المفضلة) بواسطة تكرار العملية نفسها المذكورة أعلاه.

يتم عرض الإعداد الأخير الذي قمت باستخدامه في المرة القادمة التي تختار فيها وظيفة My Cycle (الدورة المفضلة).

في حالة الضغط على زر My Cycle (الدورة المفضلة) ثم تركه لمدة ٣ ثوانٍ، يتم ظهور الدورة والخيارات السابقة التي تم حفظها. إذا قمت بالضغط مع الاستمرار على My Cycle (الدورة المفضلة) لمدة ٣ ثوانٍ أو أكثر، يتم حفظ الدورة والخيارات المعينة حاليًا ويومض مؤشر LED لمدة ٣ ثوانٍ.

Eco Bubble (الفقاعات صديقة البيئة)

كما يسمح بتوزيع المسحوق بالتساوي وتخلله داخل الملابس بشكلٍ أسرع وأعمق.

تتوافر وظيفة الفقاعات بكافة الدورات ما عدا دورة Hygiene Drum Clean (تنظيف الحاوية بطريقة صحية) ومعدل التشغيل المتاح للوظيفة هو كما يلي.

الدورة	وظيفة الفقاعات	إلغاء وظيفة الفقاعات
Cotton (قطن) و Synthetics (ألياف صناعية) و Denim (الدينيم) و Beddings (مفروشات) و Dark Garment (ملابس داكنة) و Daily Wash (غسل يومي)	متوفرة	متوفرة
Water Saving (توفير المياه) و Super Eco Wash (غسل متميز صديق للبيئة) و Outdoor Care (العناية بملابس الخروج) و Wool (صوف) و Hand Wash (غسل يدي)	متوفرة	غير متوفرة
Hygiene Drum Clean (تنظيف الحاوية بطريقة صحية)	غير متوفرة	-

• قد يتم تطبيق وظيفة فقاعات مختلفة حسب الدورة.

يعتبر خيار Eco Bubble (الفقاعات صديقة البيئة) هو الخيار الافتراضي. اضغط عليها مرة واحدة لإلغاء تحديد خيار الفقاعات. ثم اضغط مرة أخرى لتحديد خيار الفقاعات.

١. افتح الباب. ضع الغسيل بداخل حوض الغسل ثم أغلق الباب.

٢. اضغط على الزر **Power** (تشغيل).

٣. حدد وظيفة.

٤. ضع كمية مناسبة من المسحوق ومنعم الأقمشة بداخل الحجرة المناسبة وفقاً لكمية الملابس ثم قم بإغلاق الدرج.

• أضف كمية مناسبة من المسحوق بداخل حجرة المسحوق (II). ثم أضف منعم الأقمشة بحجرة المنعم (III) الموجودة أسفل الخط الرئيسي لمنعم الأقمشة مباشرة. (الحد أقصى) "A" (

• عند تحديد الدورة Pre-wash (غسل أولي). قم بإضافة المسحوق بداخل حجرة الغسل الأولى ① كذلك.

• لاستخدام المنظف السائل. ضع درج المنظف السائل بالقاعدة (راجع قسم "المنظف السائل" بالصفحة رقم ٣١).

لا تغمض بإضافة مسحوق التنظيف بداخل درج المنظف السائل.

٥. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).

• اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) لبدء عملية الغسل.

• يتم التعرف على كمية الغسيل تلقائياً ويتم غسل الملابس.

• حالما يتم بدء عملية تشغيل الغسالة، لا يمكنك إضافة وظيفة الفقاعات أو تحديدها.

• يتم توليد كمية كافية من الفقاعات بواسطة كمية محددة من المسحوق.

• الرجاء تنظيف مصفاة "الخلفات" باستمرار. يساعد التنظيف المستمر بتوليد فقاعات ذات فاعلية.

• قد يتم امتصاص الفقاعات وتبدو ككمية صغيرة وفقاً للمسحوق والملابس.

• بالرغم من أنه يتم توليد الفقاعات بمجرد بدء عملية الغسيل، فقد تستغرق دقائق عديدة للمستخدمين كي يتم مشاهدتها.

غسل الملابس

غسل الملابس باستخدام قرص تحديد الدورة

تتيح الغسالة الجديدة غسل الملابس بسهولة، باستخدام نظام "التحكم الذكي" الأوتوماتيكي من Samsung. عند اختيار أحد برامج الغسل، تقوم الغسالة بضبط درجة الحرارة ووقت الغسل وسرعات الغسل المناسبة.

١. افتح صنبور الماء.
 ٢. اضغط على الزر Power (تشغيل).
 ٣. افتح الباب.
 ٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
 ٥. أغلق الباب.
 ٦. أضف مسحوق الغسيل ومنعم الأقمشة ومسحوق الغسيل الأولي (إذا لزم الأمر) في الأدراج المناسبة.
- تتوافر خاصية Pre-wash (غسل أولي) عند تحديد الدورات Cotton (قطن) و Synthetics (ألياف صناعية) و Denim (الجينز) و Bedding (مفروشات) و Dark Garment (ملابس داكنة) و Daily Wash (غسل يومي) و Water Saving (توفير الماء). ويعد الغسل الأولي ضروريًا فقط في حالة الاتساخ الشديد للملابس.
٧. استخدم Cycle Selector (قرص تحديد الدورة) لتحديد الدورة المناسبة وفقاً لنوع المادة: Cotton (قطن) و Synthetics (ألياف صناعية) و Denim (الجينز) و Bedding (مفروشات) و Dark Garment (ملابس داكنة) و Daily Wash (غسل يومي) و Water Saving (توفير الماء) و Super Eco Wash (غسل متميز صديق البيئة) و Outdoor Care (العناية بملابس الخروج) و Wool (صوف) و Hand Wash (غسل يدوي) وستتم إضاءة المؤشرات المرتبطة بلوحة التحكم.
 ٨. في هذا الوقت، يمكنك التحكم في درجة حرارة عملية الغسل وحجم الشطف وسرعة التنشيف ووقت التأجيل بالضغط على زر الخيار المناسب.
 ٩. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) وعندما تبدأ الغسالة في العمل، يضيء مؤشر العملية ويظهر الوقت المتبقي للدورة على لوحة العرض.

خيار Pause (إيقاف مؤقت)

من الممكن إضافة/إزالة قطع الملابس في غضون ٥ دقائق من بدء الغسل.

١. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) لإلغاء قفل الباب.
 ٢. لا يمكن فتح الباب عندما تكون درجة حرارة الماء "عالية جداً" أو مستوى الماء "عالي جداً".
٢. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) لإعادة تشغيل الغسالة.

عند انتهاء الدورة:

بعد انتهاء دورة الغسل بالكامل، يتم إيقاف الغسالة تلقائيًا.

١. افتح الباب.
٢. أخرج الملابس.

غسل الملابس يدويًا

١. يمكنك غسل الملابس يدويًا دون استخدام Cycle Selector (قرص تحديد الدورة).
٢. قم بتشغيل مصدر توريد الماء.
٣. اضغط على زر Power (تشغيل) الموجود بالغسالة.
٤. افتح الباب.
٥. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
٦. أغلق الباب.
٧. أضف مسحوق الغسيل. وإذا لزم الأمر، أضف منعم الأقمشة أو مسحوق الغسيل الأولي في الأدراج المناسبة.
٨. اضغط على الزر Temp. (درجة الحرارة) لتحديد درجة الحرارة المطلوبة.
٩. (ماء بارد و ٣٠° سلتزيوس و ٤٠° سلتزيوس و ٦٠° سلتزيوس و ٩٥° سلتزيوس)
١٠. اضغط على الزر Rinse (شطف) لتحديد عدد دورات الشطف المطلوبة.
١١. الحد الأقصى لعدد دورات الشطف هو خمسة.
١٢. يتم زيادة مدة الغسل وفقًا لعدد الدورات.
١٣. اضغط على الزر Spin (تنشيف) لتحديد سرعة التنشيف. (No Spin : بدون تنشيف)
١٤. اضغط على الزر Delay End (تأجيل التوقف) بشكل متكرر للتنقل بين خيارات Delay End (تأجيل التوقف) المتوفرة بين (٣ إلى ١٩ ساعة بواقع زيادة ساعة واحدة). تشير الساعة المعروضة إلى الوقت الذي يتم الانتهاء فيه من عملية الغسل.
١٥. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت) وعندها ستبدأ دورة الغسالة.

إرشادات حول الغسيل

اتبع هذه التعليمات البسيطة للحصول على ملابس أكثر نظافة وغسل أكثر فاعلية.

قم بفحص بطاقة العناية الموجودة على الملابس دومًا قبل غسلها.



قم بفرز الملابس وغسلها وفقًا للمعايير التالية:

- بطاقة العناية: قم بفرز الملابس إلى أقطان وألياف مخلوطة وألياف صناعية وملابس حريرية وأصواف ورايون.
- اللون: قم بفصل الملابس البيضاء عن الملابس الملونة. اغسل الملابس الملونة الجديدة كل على حدة.
- الحجم: يعمل وضع الملابس بمختلف أحجامها في مرة واحدة على تحسين عملية الغسل.
- رقة اللمس: اغسل الملابس الرقيقة كل على حدة. باستخدام الدورة Delicate (أنسجة رقيقة) للحصول على ملابس صوفية وستائر وملابس حريرية نقية تبدو جديدة. افحص العلامات الموجودة بالملابس التي تريد غسلها أو راجع جدول العناية بالأقمشة في الملحق.

إفراغ الجيوب

قم بإفراغ كافة جيوب الملابس قبل كل عملية غسل. قد تتسبب الأشياء الصغيرة والصلبة ذات الأشكال غير المنتظمة مثل العملات المعدنية والشفرات والدبابيس وماسكات الورق في تلف الغسالة. لا تقم بغسل الملابس المزودة بإبريات أو أزهار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

قد تتسبب المعادن المستخدمة في الملابس في تلفها وتلف الخوض. اقلب الملابس المزينة بالأزهار والمطرزة على ظهرها قبل غسلها. إذا تركت سحابات السراويل والجواكت مفتوحة أثناء الغسل، فقد يتسبب ذلك في تلف سلة التنشيف. يجب إغلاق السحابات وتثبيتها بخيط قبل الغسل.

قد تتشابك الملابس ذات الخيوط الطويلة مع ملابس أخرى وقد يؤدي ذلك إلى تلف هذه الملابس. احرص على تثبيت الخيوط قبل بدء الغسل.

الغسل الأولي للملابس القطنية

تقدم لك الغسالة الجديدة باستخدام مساحيق الغسيل الحديثة أفضل نتائج لعمليات الغسل. ومن ثم فهي موفرة للطاقة والوقت والماء والمسحوق. لكن إذا كانت الملابس القطنية شديدة الاتساخ، استخدم pre-wash (الغسل الأولي) مع مسحوق الغسيل الذي يحتوي على البروتين.


غسل الملابس

تحديد سعة وزن الملابس

لا تتجاوز الوزن المحدد للغسالة حيث يؤدي ذلك إلى الحصول على نتائج غير مرضية. استخدم الجدول التالي لتحديد سعة الوزن لنوع الملابس التي تقوم بغسلها.

سعة الوزن	نوع القماش
WF0854 / WF0852	الطراز
٨,٥ كجم	Cotton (قطن) - متوسط/خفيف الاتساخ - شديد الاتساخ
٣,٠ كجم	Synthetics (ألياف الصناعية)
٣,٠ كجم	Denim (الدينيم)
٢,٠ كجم	Bedding (مفروشات)
٢,٠ كجم	Outdoor Care (العناية بملابس الخروج)
٢,٠ كجم	Wool (صوف)

- في حالة عدم توزيع الملابس (بضئ "UE" على لوحة العرض). وفي هذه الحالة، أعد توزيع الملابس.
- حيث يؤدي عدم توزيع الملابس إلى تقليل فاعلية دورة التنشيف.
- عند غسل "المفروشات" أو أغطية "الحاف"، قد تطول مدة الغسل أو تقل فعالية عملية التنشيف.
- بالنسبة إلى "المفروشات" أو أغطية "الحاف"، يوصى بأن تكون الحمولة ٢,٠ كجم أو أقل.
- تأكد من إدخال حمالات الصدر (التي يمكن غسلها في الماء) في شبكة غسيل (يتم شراؤها بشكل منفصل).
- قد تنكسر الأجزاء المعدنية الموجودة في حمالات الصدر ما يؤدي إلى تلف الغسيل. لذا يجب عليك أن تتأكد من وضعهم داخل شبكة غسيل جيدة.
- قد تتعلق الملابس الصغيرة والخفيفة بالباب مثل الجوارب والقفازات والمنسوجات والمناديل. لذا يرجى وضعها داخل شبكة غسيل جيدة.
- لا تقم بغسل شبكة الغسيل وحدها دون وجود ملابس بها. فقد يؤدي ذلك إلى حدوث اهتزازات تنبيه غير طبيعية في الغسالة ما قد يتسبب في حدوث إصابات.

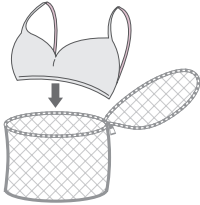

معلومات حول مسحوق الغسيل والمواد الإضافية

مسحوق الغسيل الذي يمكن استخدامه


يعتمد نوع مسحوق الغسيل الذي تستخدمه على نوع القماش (القطن أو الألياف الصناعية أو الأنسجة الرقيقة أو الصوف). والألوان ودرجة حرارة الماء ودرجة الاتساخ. استخدم دوماً مسحوق الغسيل ذي "الرغوة القليلة" والذي صُمم خصيصاً للغسالات الأوتوماتيكية. اتبع توصيات الشركة المصنعة لمسحوق الغسيل وفقاً لوزن الملابس ودرجة الاتساخ ودرجة نقاء الماء في منطقتك. وإذا لم تكن تعرف ما إذا كان الماء نقياً أم لا في منطقتك، اتصل بالهيئة المسؤولة عن الماء.

- لا تستخدم منظفاً صلباً أو خشباً لأنه قد يتبقى في دورة الشطف. قد يتسبب في أداء الغسالة لدورة الشطف بشكل غير صحيح أو يتسبب في إعاقة تدفق الماء.

درج مسحوق الغسيل

تحتوي الغسالة على أدراج منفصلة لتوزيع المسحوق ومنعم الأقمشة. قم بإضافة كافة المواد الإضافية الخاصة بتنظيف الملابس إلى الأدراج المناسبة قبل بدء تشغيل الغسالة.

⚠️ احذر فتح درج مسحوق الغسيل عندما تكون الغسالة قيد التشغيل حيث قد تتعرض للماء أو البخار الساخن.

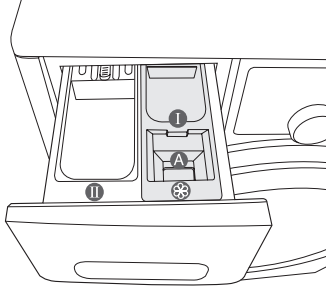


١. اسحب درج مسحوق الغسيل الموجود على الجانب الأيسر من لوحة التحكم.
٢. قم بإضافة كمية من مسحوق الغسيل الموصى به مباشرة في درج المسحوق (II) قبل تشغيل الغسالة.

⚠️ لوضع المنظف السائل. قم باستخدام درج المنظف السائل (راجع قسم "المنظف السائل" للطراز المائل).

- لا تقم بإضافة مسحوق التنظيف بداخل درج المنظف السائل.
- ٣. قم بإضافة الكمية الموصى بها من منعم الأقمشة في الدرج الخاصة به Ⓜ️ إذا لزم الأمر. لا تتجاوز خط MAX (الحد الأقصى للتعبئة) (A).

⚠️ لا تقم بإضافة أي منظف مسحوق/سائل إلى حجرة المنعم Ⓜ️.

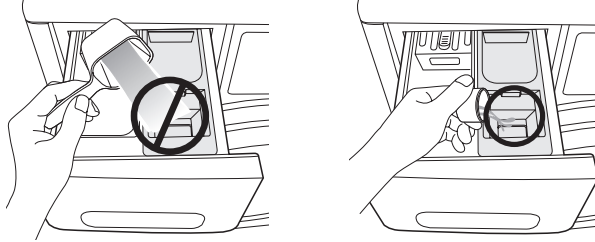


٤. عند استخدام الخيار Pre-wash (غسل أولي). قم بإضافة الكمية الموصى بها من مسحوق الغسيل في درج الغسل الأولي ①.

- ⚠️ لا تستخدم أنواع المساحيق التالية عند غسل الملابس كبيرة الحجم.
- مساحيق الغسيل التي تكون على شكل ألواح أو أقراص
- المساحيق التي تكون على شكل كرة أو شبكة


⚠️ يجب إذابة ملين الأقمشة المركز أو السميكة بقليل من الماء قبل صبه في الموزع (لنوع إعاقه تدفق الماء).

⚠️ تجنب عدم تدفق منعم الأقمشة عند غلق درج المنظف بعد إضافة منعم الأقمشة بداخل حجرة مسحوق الشطف.

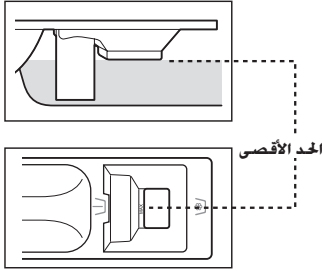

المنظف السائل (متوفر بطرازات محددة)

لاستخدام منظف سائل. قم بوضع درج المنظف السائل بداخل القسم الرئيسي للغسيل الخاص بقاعدة المنظف السائل بالدرج الخاص به.

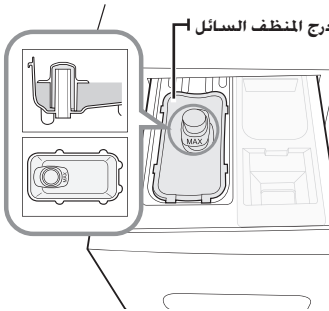

- ⚠️ لا تجاوز الملء عن الخط MAX (الحد الأقصى).
- في حالة استخدام مسحوق تنظيف. قم بإزالة درج المنظف السائل من قاعدة المنظف. لن يتم توزيع مسحوق التنظيف بواسطة درج المنظف السائل.
- قد يتبقى كمية من المنظف السائل بدرج المنظف بعد الانتهاء من الغسل.

تنظيف الغسالة وصيانتها

يؤدي حفظ الغسالة نظيفة على تحسين أدائها. وتجنب الإصلاحات غير الضرورية، وزيادة عمر الغسالة.


HYGIENE DRUM CLEAN (تنظيف الحاوية بطريقة صحية)

تعد هذه الدورة دورة تنظيف ذاتي يتم من خلالها إزالة الأتربة التي قد تعلق بالغسالة من الداخل.



1. اضغط على الزر Power (تشغيل).
2. قم بتدوير Cycle Selector (قرص تحديد الدورة) إلى Hygiene Drum Clean (تنظيف الحاوية بطريقة صحية).
- يمكنك فقط استخدام الوظيفة Delay End (تأجيل التوقف).
- يتم ضبط درجة الحرارة أثناء Hygiene Drum Clean (تنظيف الحاوية بطريقة صحية) إلى ٧٠°سلسيوس.

لا يمكنك تغيير درجة الحرارة.

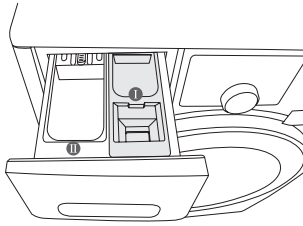


3. ضع الكمية المناسبة من المنظف في حجرة المسحوق ① وأغلق درج المسحوق (عند تنظيف الحاوية باستخدام سائل منظف).
- تأكد من استخدام المنظف الموصى به لتنظيف الحاوية.
- يوجد نوعان من المنظفات: المسحوق والسائل. يتوفر المنظف المستخدم فقط بدرج المنظف السائل (خيار).

4. اضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).
- تبدأ دورة Hygiene Drum Clean (تنظيف الحاوية بطريقة صحية) عند الضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).

- يمكنك تنظيف الحاوية بدون استخدام منظف بواسطة الدورة Hygiene Drum Clean (تنظيف الحاوية بطريقة صحية).
- لا تستخدم الدورة Hygiene Drum Clean (تنظيف الحاوية بطريقة صحية) أبدًا عند وجود ملابس داخل الغسالة. قد يتسبب ذلك في تلف النسيج أو حدوث مشكلة في الغسالة.
- احذر استخدام المسحوق العادي بدورة Hygiene Drum Clean (تنظيف الحاوية بطريقة صحية).
- استخدم ١/١٠ فقط من كمية منظف الحاوية الموصى به من قبل الشركة المصنعة للمنظف.
- تأكد من استخدام الأكسجين المبيض فقط. حيث إن استخدام الكلور المبيض قد يؤدي إلى تغيير اللون أو إزالته.
- المنظف المسحوق: استخدم [المنظف المبيض المسحوق] أو [المنظف المستخدم لتنظيف الحاوية فقط].
- المنظف السائل: استخدم [الأكسجين المبيض السائل] أو [المنظف المستخدم لتنظيف الحاوية فقط].



تنبيه

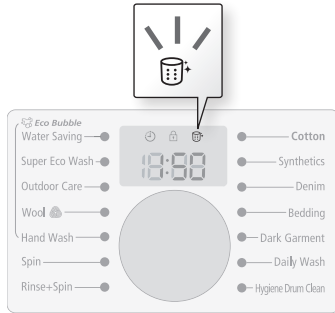


وظيفة التنبيه الآلي الخاصة بـ Hygiene Drum Clean (تنظيف الحاوية بطريقة صحية)


- إذا كان المؤشر Hygiene Drum Clean (تنظيف الحاوية بطريقة صحية) على لوحة العرض والمصباح الموجود على Cycle Selector (قرص تحديد الدورة) مضاءً بعد عملية الغسيل، يشير ذلك إلى ضرورة تنظيف الحوض (الحاوية). في هذه الحالة، قم بإخراج الغسيل من الغسالة، ثم قم بتشغيلها، وتنظيف الحاوية باستخدام Hygiene Drum Clean (تنظيف الحاوية بطريقة صحية).
- إذا لم تقم بتشغيل دورة Hygiene Drum Clean (تنظيف الحاوية بطريقة صحية)، يتم إيقاف تشغيل مؤشر Eco Drum Clean (تنظيف الحاوية صديق البيئة) على لوحة العرض والمصباح الموجود على Cycle Selector (قرص تحديد الدورة). وبالرغم من ذلك، يتم تشغيل مؤشر Hygiene Drum Clean (تنظيف الحاوية بطريقة صحية) على اللوحة والمصباح الموجود على Cycle Selector (قرص تحديد الدورة) مرة أخرى بعد دورتين من الغسيل. ومع ذلك، لا يؤدي الأمر إلى حدوث مشكلة في الغسالة.
- وعمومًا، فإن وظيفة التنبيه الآلي الخاصة بـ Hygiene Drum Clean (تنظيف الحاوية بطريقة صحية) تظهر مرة في الشهر تقريبًا. قد يختلف تكرار التنبيه وفقًا لعدد مرات استخدام الغسالة.
- لمزيد من الاحتياط، الرجاء أيضًا تنظيف مصفاة الخلفات (راجع القسم "تنظيف مصفاة الخلفات" بصفحة ٣٤). وإلا قد ينخفض الأداء الخاص بوظيفة الفقاعات.




تصريف الماء من الغسالة عند الطوارئ

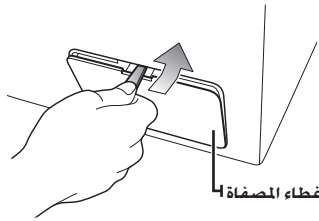

١. قم بفصل الغسالة من مصدر الطاقة.
٢. افتح غطاء المصفاة باستخدام عملة معدنية أو مفتاح.

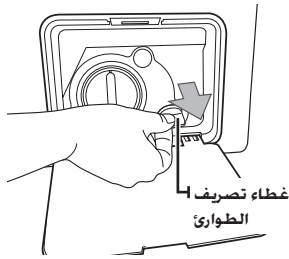

٣. افتح غطاء التصريف عند الطوارئ عن طريق سحبه.

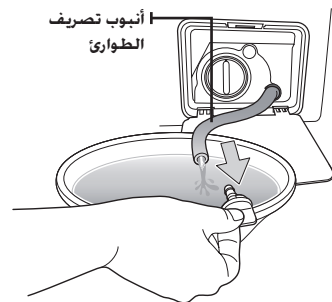

٤. أمسك الغطاء من نهاية أنبوب التصريف عند الطوارئ واجذبه ببطء مسافة حوالي ١٥ سم.
٥. اسمح بتدفق الماء بأكمله في وعاء.
٦. قد تبقى مياه بكمية أكثر مما تتوقع. قم بتحضير وعاء أكبر.
٧. قم بإعادة إدخال غطاء التصريف عند الطوارئ وأنبوبة التصريف. أعد غطاء المصفاة إلى مكانه.

تنظيف الغسالة وصيانتها

تنظيف مصفاة الخلفات

نوصي بتنظيف مصفاة الخلفات ٥ أو ٦ مرات في العام أو عند عرض رسالة الخطأ "5E". (راجع "تصريف الغسالة عند الطوارئ" في القسم السابق). إذا تم تراكم مواد خارجية بمصفاة الخلفات، يتم التقليل من أداء وظيفة الفقااعات.



قبل البدء بتنظيف مصفاة الخلفات، تأكد من فصل سلك التيار الكهربائي.

تنبيه


١. قم بإزالة المياه المتبقية أولاً (راجع "تصريف الغسالة عند الطوارئ" بصفحة ٣٣).

٢. إذا قمت بفصل المصفاة بدون تصريف المياه المتبقية، قد يتم رش المياه المتبقية للخارج.

٣. افتح غطاء المصفاة باستخدام مفتاح أو قطعة معدنية.

٤. أرخ غطاء التصريف عند الطوارئ بلفه إلى اليسار لصرف الماء من الغسالة.

٥. فك غطاء مصفاة الخلفات.

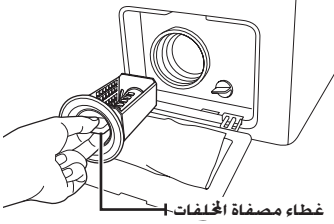

غطاء مصفاة الخلفات

٦. اغسل أي أوساخ أو أي مواد أخرى عالقة في مصفاة الخلفات. تأكد من أن مروحة مضخة التصريف الموجودة خلف مصفاة الخلفات غير مسدودة.

٧. ضع غطاء مصفاة الخلفات في مكانه.

٨. ضع غطاء المصفاة في مكانه.

لا تفتح غطاء مصفاة الخلفات أثناء تشغيل الغسالة أو قد تتدفق المياه الساخنة للخارج.

تأكد من استبدال غطاء المصفاة بعد تنظيف المصفاة. إذا كانت المصفاة بخارج الغسالة، قد يحدث خلل في وظائف تشغيل الغسالة أو تسرب للمياه.

ينبغي تركيب المصفاة جيداً بعد الانتهاء من تنظيفها.



تنبيه




تنظيف الأسطح الخارجية

١. امسح الأسطح الخارجية لجهاز الغسالة، بما في ذلك لوحة التحكم بقطعة من القماش الناعم ومسحوق تنظيف منزلي غير خادش.

٢. استخدم قطعة من القماش الناعم لتجفيف الأسطح الخارجية.


٣. لا تصب الماء على الغسالة.

تنظيف درج مسحوق الغسيل والجزء الداخلي منه

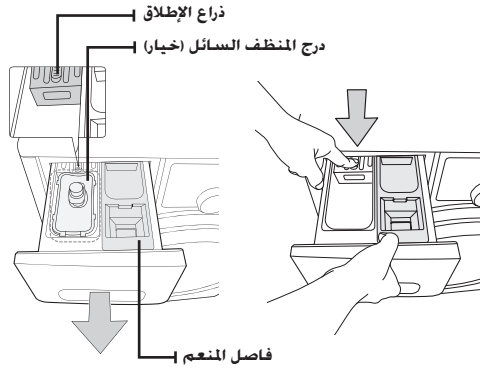


١. اضغط على ذراع الإطلاق الموجود داخل درج مسحوق الغسيل واسحبه إلى الخارج.
٢. قم بإزالة الفاصل الخاص بالمنعم ودرج المنظف السائل (اختياري) من قاعدة المنظف.

٣. اغسل كافة الأجزاء بالماء الجاري.

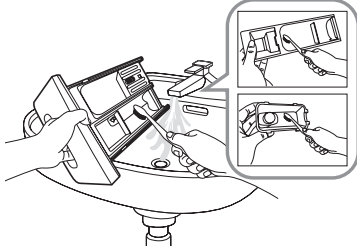

٤. نظف الجزء الداخلي للدرج باستخدام فرشاة أسنان قديمة.
٥. استبدل الفاصل الخاص بالمنعم ودرج المنظف السائل (اختياري) بدفعه بقوة داخل القاعدة.
٦. أعد الدرج إلى مكانه.
٧. قم بتشغيل دورة الشطف دون وجود أي غسيل في الحاوية لإزالة أي مسحوق متبق.

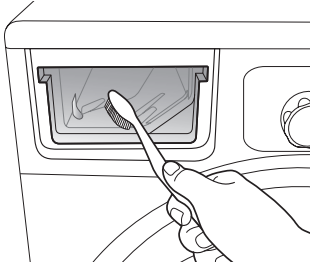

تنظيف المصفاة الشبكية المتصلة بخرطوم الماء

يجب تنظيف المصفاة الشبكية المتصلة بخرطوم الماء مرة كل عام على الأقل. أو عند ظهور رسالة الخطأ "4E".

١. قم بإيقاف تشغيل مصدر توريد الماء إلى الغسالة.
٢. فك الخرطوم من الجانب الخلفي للغسالة. قم بتغطية الخرطوم بقطعة من القماش. لمنع تدفق الماء بسبب الضغط العالي في الخرطوم.
٣. اسحب المصفاة الشبكية إلى الخارج من طرف الخرطوم بلطف باستخدام زردية واشطفها بالماء حتى تصبح نظيفة. نظف أيضاً الجزأين الداخلي والخارجي للوصلة الملفوفة.
٤. أعد المصفاة إلى مكانها.
٥. ثبت الخرطوم بالغسالة مرة أخرى.
٦. تأكد أن الوصلات محكمة ضد الماء وقم بتشغيل الصنبور.

تنظيف الغسالة وصيانتها

إصلاح غسالة متجمدة

إذا انخفضت درجة الحرارة إلى أقل من درجة التجمد وتجمدت الغسالة:

١. افصل الغسالة من مصدر التيار الكهربائي.
٢. صب الماء الدافئ على صنبور الماء لفك خرطوم توريد الماء.
٣. قم بإزالة خرطوم توريد الماء وانقعه في الماء الدافئ.
٤. صب الماء الدافئ في حاوية الغسالة واتركه لمدة ١٠ دقائق.
٥. أعد توصيل خرطوم توريد الماء إلى صنبور الماء وتأكد من أن توريد الماء والتصريف يتم كما ينبغي.

تخزين الغسالة

إذا كنت بحاجة إلى تخزين الغسالة لمدة طويلة، فمن المستحسن تصريف الماء منها وفصلها. قد تتلف الغسالة في حالة ترك ماء في الخراطيم والمكونات الداخلية قبل التخزين.

١. حدد دورة **Cotton (قطن)** ثم قم بإضافة مادة تبيض في الحجرة الخاصة بها. ثم قم بدفع الزر **Quick Wash (غسل سريع)** و قم بتشغيل الغسالة من خلال الدورة بدون تعبئة.
 ٢. قم بغلق صنبور الماء وافصل خراطيم توريد الماء.
 ٣. قم بفصل الغسالة عن مأخذ التيار الكهربائي. واترك باب الغسالة مفتوحاً للسماح بدخول الهواء داخل الحاوية.
- في حالة قيامك بتخزين الغسالة في درجات حرارة تحت درجات التجمد، اترك فرصة لخروج الماء المتبقي في الغسالة قبل استخدامها. 

استكشاف المشاكل وحلها ورموز المعلومات

تحقق مما يلي إذا كانت الغسالة...

المشكلة	الحل
الغسالة لا تعمل	• تأكد من توصيل قابس الغسالة بمصدر التيار الكهربائي. • تأكد من إغلاق الباب بإحكام. • تأكد من فتح صنبور (صنابير) مصدر الماء. • تأكد من الضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).
عدم وجود ماء أو عدم وجود ماء كافٍ	• افتح الصنبور تمامًا. • تأكد من أن خرطوم توريد الماء غير متجمد. • فك ثنيات خرطوم توريد الماء. • نظف المصفاة الموجودة على خرطوم توريد الماء.
هل يوجد مسحوق غسيل في الدرج بعد اكتمال دورة الغسيل	• تأكد من تشغيل الغسالة بضغط ماء كافٍ. • تأكد من إضافة مسحوق الغسيل في منتصف درج المسحوق.
تهتز الغسالة أو تحدث صوتًا مرتفعًا	• تأكد من تركيب الغسالة على سطح مستو. إذا كانت الأرض غير مسطحة، اضبط أقدام الغسالة حتى تستقر على الأرضية. • تأكد من فك مسامير الشحن. • تأكد من عدم ملاصقة الغسالة لأي شيء آخر. • تأكد من توزيع وزن الملابس الموجودة في الغسالة.
لا يتم تصريف الماء من الغسالة و/أو لا تتم بعملية التنشيف	• فك الثنيات الموجودة في خرطوم التصريف. قلل من استخدام الخرطوم الملتوية. • تأكد من أن المصفاة الشبكية المتصلة بخرطوم الماء غير مسدودة.
الباب مغلق ولا يمكن فتحه.	• لا يمكن فتح الباب إلا بعد مرور ٣ دقائق على توقف الغسالة عن العمل أو فصل التيار الكهربائي.

في حالة استمرار المشكلة، اتصل بمركز خدمة عملاء Samsung المحلي.

استكشاف المشاكل وحلها ورموز المعلومات

رموز المعلومات

في حالة تعرض الغسالة لأعطال، قد يظهر أحد رموز المعلومات على لوحة العرض. في حالة حدوث ذلك، الرجاء التحقق من هذا الجدول ومحاولة إجراء الحلول المقترحة قبل الاتصال بخدمة العملاء.

رمز الكود	الحل
dE	- تأكد من إغلاق الباب بإحكام. - تأكد من أن الملابس غير عالقة بالباب.
4E	- تأكد أن صنبور توريد الماء مفتوح. - تأكد من ضغط الماء. - قم بتنظيف المصفاة الشبكية المتصلة بخرطوم الماء.
5E	- نظف مصفاة الخلفات. - تأكد من تركيب خرطوم تصريف الماء بطريقة صحيحة. - قم بتنظيف المصفاة الشبكية المتصلة بخرطوم الماء.
UE	وزن الملابس غير موّزّع. قم بإعادة توزيع الملابس. في حالة غسل قطعة واحدة من الملابس، مثل برنس حمام أو جينز، قد لا تكون نتيجة التجفيف النهائي مرضية. وتظهر رسالة خطأ "UE" في إطار العرض.
cE/3E/Uc	اتصل بمركز خدمة ما بعد البيع.

بالنسبة للرموز التي لم تذكر أعلاه، أو في حالة عدم مساهمة الحل المقترح في حل المشكلة، اتصل بمركز خدمة Samsung أو الموزّع المحلي المعتمد التابع لـ Samsung.

جدول الدورات

جدول الدورات

(● خيار المستخدم)

البرنامج	أقصى وزن (كجم)	مسحوق الغسيل			درجة الحرارة القصوى (درجة سيلزيوس)	عدد الدورات في الدقيقة لسرعة التثبيت (القصوى)	
		غسل أولي	غسل	منعم الأقمشة		WF0852	WF0854
قطن	٨,٥	●	نعم	●	٩٥	١٢٠٠	١٤٠٠
ألياف الصناعية	٣,٠	●	نعم	●	٦٠	١٢٠٠	١٢٠٠
الجينز	٣,٠	●	نعم	●	٦٠	٨٠٠	٨٠٠
مفروشات	٢,٠	●	نعم	●	٤٠	٨٠٠	٨٠٠
ملابس داكنة	٤,٠	●	نعم	●	٤٠	١٢٠٠	١٢٠٠
غسل يومي	٣,٠	●	نعم	●	٦٠	١٢٠٠	١٤٠٠
تنظيف الحاوية بطريقة صحية	-	-	-	-	٧٠	٤٠٠	٤٠٠
توفير الماء	٨,٥	●	نعم	●	٦٠	١٢٠٠	١٤٠٠
غسل متميز صديق البيئة	٤,٠	-	نعم	●	٤٠	١٢٠٠	١٢٠٠
العناية بملابس الخروج	٢,٠	-	نعم	●	٤٠	١٢٠٠	١٢٠٠
صوف	٢,٠	-	نعم	●	٤٠	٨٠٠	٨٠٠
الغسل اليدوي	٢,٠	-	نعم	●	٤٠	٤٠٠	٤٠٠

البرنامج	الفقاعات صديقة البيئة	مكثف	نقع	كي سهل	تأجيل التوقف	الغسل السريع	مدة الدورة (دقيقة)
قطن	●	●	●	●	●	●	١١٠
ألياف الصناعية	●	●	●	●	●	-	٨٠
الجينز	●	●	●	●	●	-	٦٨
مفروشات	●	●	●	●	●	-	٨٧
ملابس داكنة	●	●	-	●	●	-	٧٣
غسل يومي	●	-	●	●	●	-	٥٤
تنظيف الحاوية بطريقة صحية	-	-	-	-	●	-	٨٦
توفير الماء	●	●	●	●	●	-	١٣٥
غسل متميز صديق البيئة	●	●	-	●	●	-	٩٢
العناية بملابس الخروج	●	-	-	-	●	-	٧٧
صوف	●	-	-	-	●	-	٥٥
الغسل اليدوي	●	-	-	-	●	-	٣١

١. تستغرق دورة الغسل الأولي مدة أطول بحوالي ١٥ دقيقة.
٢. تم قياس بيانات مدد الدورات وفقاً للشروط المنصوص عليها في مقياس IEC 60456/EN 60456.
٣. Cotton (قطن) ٩٦٠ سلزيوس + intensive (مكثف) + Eco bubble (الفقاعات صديقة البيئة) هي عبارة عن برامج وذلك وفقاً لمعيار EN60456.
٤. Daily Wash (غسيل يومي): البرنامج القصير لتعيين اختبار.
٥. قد تختلف مدة الدورة في كل منزل عن القيم المبينة في الجدول بسبب الاختلاف في ضغط الماء ودرجة الحرارة الخاصة بتوريد الماء وكمية الغسيل ونوعه.
٦. عند تحديد الوظيفة Intensive Wash (غسل مكثف). تتم زيادة مدة الدورة لكل الدورات.
٧. تم تحديد مواصفات ملصق الطاقة باستخدام البرنامج الآتي وفقاً للمعيارين SASO 2692 و SASO 2693.
- البرنامج هو Water Saving (توفير الماء) ٤٠ درجة مئوية + Intensive (غسل مكثف) + Rinse ٣ (شطف) + ١٤٠٠ دورة في الدقيقة.

الملحق

جدول العناية بالأقمشة

توضح الرموز التالية تعليمات العناية بالملابس. تتضمن بطاقات العناية أربعة رموز على النحو التالي: غسيل وتبييض وجفيف وكي (وتنظيف جاف إذا لزم الأمر). يضمن استخدام هذه الرموز التناسق بين الشركات المصنعة للملابس المحلية والمستوردة. اتبع تعليمات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

مواد مقاومة		يمكن الكي عند ١٠٠ سلفريوس بحد أقصى
الملابس الرقيقة		يحظر الكي
		يمكن الغسل عند درجة ٩٥ سلفريوس
		يمكن الغسل عند ٦٠ سلفريوس
		يمكن الغسل عند ٤٠ سلفريوس
		يمكن الغسل عند ٣٠ سلفريوس
يمكن غسلها باليد		جفف وهي مفرودة
تنظيف جاف فقط		يمكن نشرها لتجف
يمكن استخدام مادة تبييض مع الماء البارد		جفف الملابس وهي معلقة على حمالة
يحظر استخدام مادة تبييض		جفف بالتدوير. حرارة عادية
يمكن الكي عند ٢٠٠ سلفريوس بحد أقصى		جفف بالتدوير. حرارة خفيفة
يمكن الكي عند ١٥٠ سلفريوس بحد أقصى		يحظر جففها بالتدوير

حماية البيئة

- هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز، يرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. أقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر طاقة. قم بإزالة الباب لمنع تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.
- لا تضع مسحوق الغسيل أكثر من الكمية المحددة المبينة في تعليمات الشركة المصنعة لمسحوق الغسيل.
- استخدم مواد إزالة البقع ومواد التبييض قبل دورة الغسيل عند الحاجة فقط.
- وفر الماء والكهرباء من خلال إجراء الغسل بأوزان كاملة (تختلف الكمية وفقاً للبرنامج المستخدم).

بيان التوافق

يتوافق هذا الجهاز مع مقاييس السلامة الأوروبية EC directive 93/68 وEN Standard 60335.

المواصفات

غسالة أمامية التحميل		النوع			
WF0852 / WF0854		الأبعاد			
العرض ٥٩٨ مم × العمق ٦٠٠ مم × الارتفاع ٨٤٤ مم					
٥٠ كيلوباسكال ~ ٨٠٠ كيلوباسكال		ضغط الماء			
٥٢ لتر		كمية الماء			
WF0852 / WF0854		الوزن الصافي			
٦٩ كجم					
٨,٥ كجم		سعة الغسيل والتنشيف			
WF0852 / WF0854		الطراز		استهلاك الطاقة	
١٥٠ واط		٢٢٠ فولت	الغسل		
١٥٠ واط		٢٤٠ فولت			
٢٠٠٠ واط		٢٢٠ فولت	الغسل والتسخين		
٢٤٠٠ واط		٢٤٠ فولت			
WF0852 / WF0854		الطراز			التنشيف
٣٥٠ واط		٢٣٠ فولت			
٣٤ واط		الضخ			
WF0852 / WF0854		الطراز		وزن العبوة	
٢,٥ كجم		الغلاف الورقي			
٢,٥ كجم		الغلاف البلاستيكي			
WF0852	WF0854	الطراز		دورات التنشيف	
١٢٠٠	١٤٠٠	دورة في الدقيقة			

قد يتعرض شكل المنتج ومواصفاته للتغيير دون إخطار مسبق لأغراض تحسين المنتج.

مذكرة

مذكرة



هل لديك أسئلة أو تعليقات؟

أوقم بزيارة موقعنا على الإنترنت على	اتصل بـ	البلد
www.samsung.com	9200-21230	Saudi Arabia

كود رقم DC68-02938D-01_AR